

POSIDRIVE® FDS 5000

Commissioning Instructions

Reinstallation

Replacement



V 5.6-S or later

Table of contents

1	Introduction	4
1.1	About this manual	4
1.2	Further documentation	4
1.3	Further support	5
1.4	Trademarks	5
2	Notes on safety	6
2.1	Component part of the product	6
2.2	Operation in accordance with its intended use	6
2.3	Risk assessment	6
2.4	Ambient conditions	7
2.5	Qualified personnel	8
2.6	Transportation and storage	8
2.7	Installation and connection	9
2.8	Commissioning, operation and service	9
2.9	Disposal	10
2.10	Residual dangers	10
2.11	Presentation of notes on safety	11
3	Install accessories	12
3.1	Installation of terminal extension LEA 5000	12
3.2	Installing communication accessories	14
3.2.1	Install CAN 5000 or DP 5000	14
3.2.2	Install ECS 5000 or PN 5000	17
4	Device information	19
4.1	Overview of terminals	19
4.1.1	Fieldbus modules	21
4.2	Dimensions	22
4.3	Installation of the inverter in the switching cabinet	23



4.4	Housing ground	25
4.5	Forming	26
5	Reinstallation	29
5.1	Reinstall inverter	29
5.2	Reinstall inverter with bottom brake resistor	30
5.3	Reinstall inverter with EMC/brake module	32
5.4	Reinstall the inverter with the bottom brake resistor and EMC/brake module	34
6	Replacement	37
6.1	Replacing the inverter	38
6.2	Replace the inverter with the bottom brake resistor	40
6.3	Replace the inverter with EMC/brake module	43
6.4	Replace the inverter with bottom brake resistor and EMC/brake module	46

1 Introduction

1.1 About this manual

This manual describes:

- How to install a new inverter in a control cabinet.
- How to replace an inverter.

Original version

The original language of this documentation is German.

1.2 Further documentation

Manual	Contents	ID
Projecting manual FDS 5000	Installation and connection	442269
Operating manual FDS 5000	Set up the inverter	442281

You can find the latest document versions at www.stoerber.de.

The devices of the 5th generation of STÖBER inverters can be optionally connected with different fieldbus systems. The connection is described in the following manuals:

Manuals	ID
PROFIBUS DP operating manual	441687
CANopen operating manual	441686
EtherCAT operating manual	441896
PROFINET operating manual	442340
USS operating manual	441707

You can find the latest document versions at www.stoerber.de.



1.3 Further support

If you have technical questions that are not answered by this document, please contact:

- Phone: +49 7231 582-3060
- E-mail: applications@stoeber.de

If you have questions about the documentation, please contact:

- E-mail: electronics@stoeber.de

If you have questions about training sessions, please contact:

- E-mail: training@stoeber.de

1.4 Trademarks

POSIDRIVE®, POSIDYN® and POSISwitch® are trademarks of STÖBER Antriebstechnik GmbH + Co. KG. The following names that are used in conjunction with the device, its optional equipment and its accessories are trademarks or registered trademarks of other companies:

Trademarks	
CANopen®, CiA®	CANopen® and CiA® are registered Community trademarks of CAN in Automation e.V., Nuremberg, Germany.
EnDat®	EnDat® and the EnDat® logo are registered trademarks of Dr. Johannes Heidenhain GmbH, Traunreut, Germany.
EtherCAT®, Safety over EtherCAT®, TwinCAT®	EtherCAT®, Safety over EtherCAT® and TwinCAT® are registered trademarks and patented technologies that are licensed by Beckhoff Automation GmbH, Verl, Germany.
PROFIBUS®, PROFINET®	The PROFIBUS®/PROFINET® logo is a registered trademark of PROFIBUS Nutzerorganisation e. V. Karlsruhe, Germany.

All other trademarks that are not listed here are the property of their respective owners.

Products that are registered as trademarks are not specially indicated in this documentation. Existing property rights (patents, trademarks, protection of utility models) are to be observed.

2 Notes on safety

The devices can represent a source of danger. Therefore observe

- the safety guidelines, technical rules and regulations given in the following sections and the
- Generally applicable technical rules and regulations.

Always read the corresponding documentation as well. STÖBER Antriebstechnik GmbH + Co. KG shall assume no liability for damage resulting from failure to comply with the instruction manual or relevant regulations. This documentation is purely a production description. It does not include any guaranteed features in terms of a warranty right. We reserve the right to make technical changes for the purpose of improving the devices.

2.1 Component part of the product

As this documentation includes important information for the safe and efficient handling of the product, always keep it in the immediate vicinity of the product until product disposal and ensure it can be accessed by qualified personnel at any time.

Also pass on this documentation if the product is handed over or sold to a third party.

2.2 Operation in accordance with its intended use

As defined by DIN EN 50178 (previously VDE 0160), the inverters are electrical equipment operating as power electronics to control the flow of energy in high voltage systems. They are designed exclusively for installation in the control cabinet with at least protection class IP54 and for supplying asynchronous motors. Designated use does not include connecting other electrical loads!

2.3 Risk assessment

Before the manufacturer may bring a machine onto the market, he must conduct a risk assessment according to Machine Directive 06/42/EC. As a result, the risks associated with the use of the machine are determined. The risk assessment is a multi-stage and iterative process. On no account can sufficient insight into the Machine Directive be given as part of this documentation. For this reason, seek detailed information about the norms and legal position. When installing the inverter in machines, commissioning is forbidden until it has been determined that the machine meets the requirements of EC Directive 06/42/EC.



2.4 Ambient conditions

The inverters are products subject to sales restrictions in accordance with IEC 61800-3. In a residential environment this product may cause high-frequency interference. If this occurs the user may be asked to take suitable measures to reduce it.

The inverters are not designed for use in a public low frequency network that supplies residential areas. High-frequency interference can be expected if the inverters are used in a network of this type. The inverters are designed exclusively for operation in TN networks. The inverters are only suitable for use in supply current networks that are able to provide a maximally symmetrical nominal short circuit current at maximally 480 volts according to the following table:

Size	Max. symmetrical nominal short-circuit current
0 and 1	5,000 A

Install the inverter in a control cabinet in which the admissible surrounding temperature will not be exceeded.

The following applications are prohibited:

- Use in areas subject to explosion hazard
- Use in environments with harmful substances as specified by EN 60721, for example oils, acids, gases, vapors, dust and radiation
- Use with mechanical vibration and impact loads exceeding the limits specified in the technical data in the projecting manuals

Implementation of the following applications is only permitted after approval is obtained from STÖBER:

- Use in non-stationary applications

2.5 Qualified personnel

Since the devices may harbor residual risks, all configuration, transportation, installation and commissioning tasks including operation and disposal may only be performed by trained personnel who are aware of the possible risks.

Personnel must have the qualifications required for the job. The following table lists examples of occupational qualifications for the jobs:

Activity	Possible occupational qualifications
Transportation and storage	Worker skilled in storage logistics or comparable training
Configuration	- Graduate engineer (electro-technology or electrical power technology) - Technician (m/f) (electro-technology)
Installation and connection	Electronics technician (m/f)
Commissioning (of a standard application)	- Technician (m/f) (electro-technology) - Master electro technician (m/f)
Programming	Graduate engineer (electro-technology or electrical power technology)
Operation	- Technician (m/f) (electro-technology) - Master electro technician (m/f)
Disposal	Electronics technician (m/f)

In addition, the valid regulations, the legal requirements, the reference books, this technical documentation and, in particular, the safety information contained therein must be carefully

- read,
- understood and
- complied with.

2.6 Transportation and storage

Immediately upon receipt, examine the delivery for any transportation damages. Immediately inform the transportation company of any damages. If damages are found, do not commission the product. If the device is not to be installed immediately, store it in a dry, dust-free room. Please see the documentation for how to commission an inverter after it has been in storage for a year or longer.



2.7 Installation and connection

Installation and connection work are only permitted after the device has been isolated from the power!


The accessory installation instructions allow the following actions during the installation of accessories:

- The housing in the upper slot can be opened.

Opening the housing in another place or for other purposes is not permitted.

Use only copper conductors. For the line cross sections to be used, refer to DIN VDE 0298-4 or DIN EN 60204-1 Appendix D and Appendix G.

The permissible protection class is protective ground. Operation is not permitted unless the protective ground is connected in accordance with the regulations. Comply with the applicable instructions for installation and commissioning of motor and brakes.

Main equipment grounding markings: The main ground connections are marked "PE" or with the international ground symbol (IEC 60417, Symbol 5019 )

The motor must have an integrated temperature monitor with basic isolation in acc. with EN 61800-5-1 or external motor overload protection must be used.

Protect the device from falling parts (pieces of wire, leads, metal parts, and so on) during installation or other tasks in the switching cabinet. Parts with conductive properties inside the inverter can cause short circuits or device failure.

For information regarding use under UL conditions (UL – Underwriters Laboratories) please pay close attention to section 2 in the projecting manual (see section 1.2 Further documentation).

2.8 Commissioning, operation and service

Remove the additional covers before commissioning so that the device will not overheat. Note the minimum open areas specified in the projecting manuals during installation to prevent the inverter and its accessories from overheating.

The inverter housing must be closed before you turn on the power supply voltage. When the power supply voltage is turned on, hazardous voltages may be present on the connection terminals and the cables and motor terminals connected to them. Note that the device is not reliably free of voltage simply because all the displays are blank.

The following actions are prohibited while the supply voltage is applied

- Opening the housing
- Connecting or disconnecting connection clamps and
- Installing/removing or attaching/detaching accessories.

Apply the 5 safety rules in the order stated before performing any work on the machine:

1. Disconnect.
Also ensure that the auxiliary circuits are disconnected.
2. Protect against being turned on again.
3. Check that voltage is not present.
4. Ground and short circuit.
5. Cover adjacent live parts.



Information

Note that the discharge time of the DC link capacitors is up to 6 minutes. You can only determine the absence of voltage after this time period.

You can carry out work on the inverter later. Repairs may only be performed by STÖBER.

Send faulty devices with a fault description to:

STÖBER Antriebstechnik GmbH + Co. KG
 Department VS-EL
 Kieselbronner Str.12
 75177 Pforzheim
 GERMANY

2.9 Disposal

Please observe the current national and regional regulations! Dispose of the individual parts separately depending on the quality and currently applicable regulations, e.g. as

- Electronic waste (circuit boards)
- Plastic
- Sheet metal
- Copper
- Aluminum
- Battery

2.10 Residual dangers

The connected motor can be damaged with certain settings of inverters:

- Longer operation against an applied motor halting brake
- Longer operation of self-cooled motors at slow speeds

Drives can reach dangerous excess speeds (e.g., setting of high output frequencies for motors and motor settings which are unsuitable for this). Secure the drive accordingly.

2.11 Presentation of notes on safety

NOTICE

Notice

means that property damage may occur

- ▶ if the stated precautionary measures are not taken.

CAUTION!

Caution

with warning triangle means that minor injury may occur

- ▶ if the stated precautionary measures are not taken.

WARNING!

Warning

means that there may be a serious danger of death

- ▶ if the stated precautionary measures are not taken.

DANGER!

Danger

means that serious danger of death exists

- ▶ if the stated precautionary measures are not taken.



Information

refers to important information about the product or serves to emphasize a section in the documentation to which the reader should pay special attention.

3 Install accessories

3.1 Installation of terminal extension LEA 5000

WARNING!

Danger of personal injury and material damage due to electric shock!

- ▶ Always switch off all power supply voltage before working on the inverter! Note that the discharge time of the DC link capacitors is up to 6 minutes. You can only determine the absence of voltage after this time period.

NOTICE

Material damage due for example to electrostatic discharge!

- ▶ Take suitable protective measures when handling open printed circuit boards, for example clothing appropriate for ESD and an environment free of dirt and grease.
- ▶ Do not touch the contact surfaces.


The LEA 5000 accessory adds 8 binary inputs and 8 binary outputs to the standard terminals of the FDS 5000. The accessory part is installed above the inverter's display.

You need the following to install the LEA 5000:


- The metal plate that comes with the accessory.
- A Phillips screwdriver.

Installing the LEA 5000 in a FDS 5000

1. Undo the fastening screws and take off the cover plate:

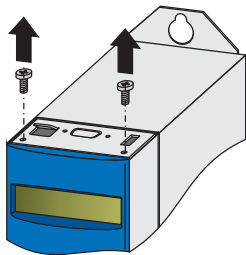


2. Remove the connector from the terminal extension LEA 5000.

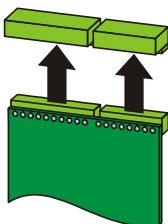





- Put the metal plate over the base strip. Pay attention to the alignment of the metal plate!

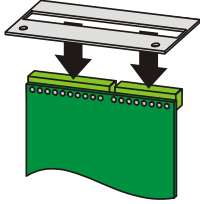


- Replug the connector on the terminal extension.

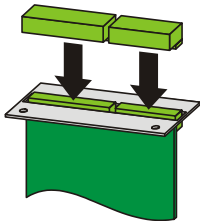

- Guide the option board in the inverter so that the gold contacts are pushed in the black terminal block:

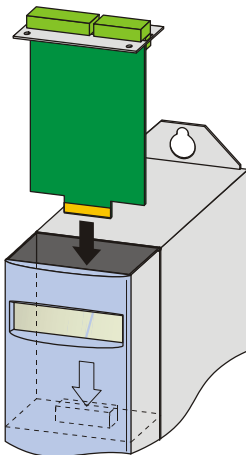

- Fasten the plate to the inverter with the fastening screws:

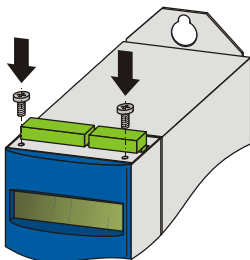

⇒ You have now installed the accessory.

3.2 Installing communication accessories

Communication accessories include option boards for CANopen, PROFIBUS, EtherCAT and PROFINET.

WARNING!

Danger of personal injury and material damage due to electric shock!

- ▶ Always switch off all power supply voltage before working on the inverter! Note that the discharge time of the DC link capacitors is up to 6 minutes. You can only determine the absence of voltage after this time period.

NOTICE

Material damage due for example to electrostatic discharge!

- ▶ Take suitable protective measures when handling open printed circuit boards, for example clothing appropriate for ESD and an environment free of dirt and grease.
- ▶ Do not touch the contact surfaces.

3.2.1 Install CAN 5000 or DP 5000

To connect CANopen or PROFIBUS, you need the following accessory. The accessory is installed above the inverter display:


- CANopen: CAN 5000
- PROFIBUS: DP 5000

To install CAN 5000 or DP 5000, you need the following:

- A Torx screwdriver TX10.
- Pliers.
- 4.5 mm hexagonal socket wrench.


Installing CAN 5000 or DP 5000 in an inverter

1. Undo the fastening screws and take off the cover plate:

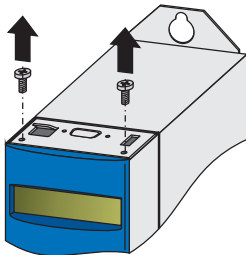




 
- Remove the punched out metal plate with pliers:




- Remove the screws on the option board:

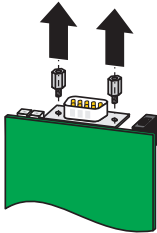


- Guide the D-sub connector of the board from below through the metal plate:

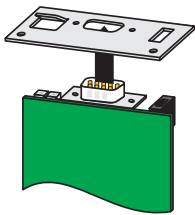


- Fasten the board on the metal plate with the screws removed in step 3:

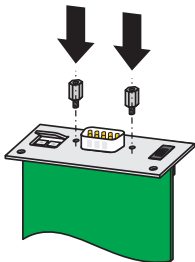

6. Guide the option board in the inverter so that the gold contacts are pushed in the black terminal block:

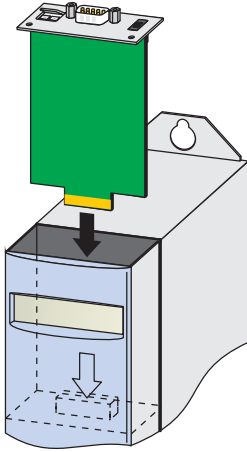

7. Fasten the plate to the inverter with the fastening screws:

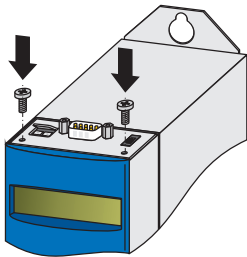

⇒ You have now installed the accessory.




3.2.2 Install ECS 5000 or PN 5000

To connect EtherCAT or PROFINET, you need the following accessory. The accessory is installed above the inverter display:


- EtherCAT: ECS 5000
- PROFINET: PN 5000

For installation you need:

- A Torx screwdriver TX10; a Phillips screwdriver.
- To install ECS 5000, the following metal plate that comes with the accessory:

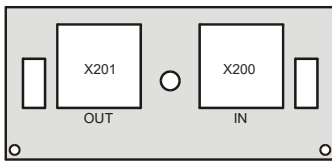


- To install PN 5000, the following metal plate that comes with the accessory:

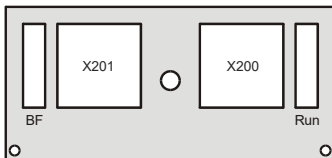


- The screw with the detent edge disk that is included with the accessory.

Installing ECS 5000 or PN 5000 in an inverter


1. Undo the fastening screws and take off the cover plate:

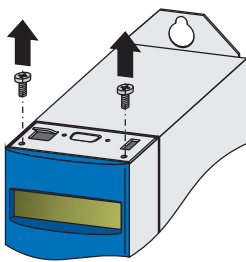


2. Guide the RJ45 connector of the circuit board from below through the plate that is included with the accessory:

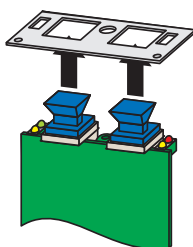


3. Fasten the plate on the circuit board with the screw with the detent edge disk that is included:

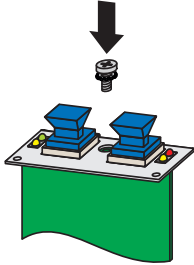

4. Guide the option board in the inverter so that the gold contacts are pushed in the black terminal block:

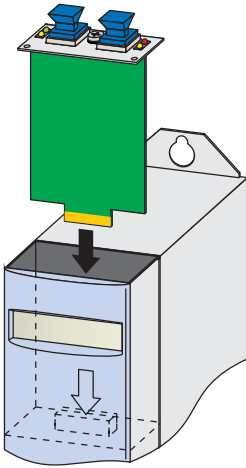

5. Fasten the plate to the inverter with the fastening screws:

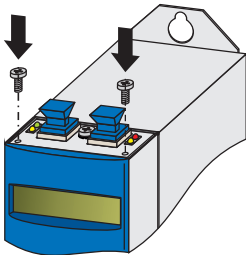

- ⇒ You have now installed the accessory.




4 Device information

4.1 Overview of terminals


Front and top of the device

(in the example with fieldbus module CAN 5000)

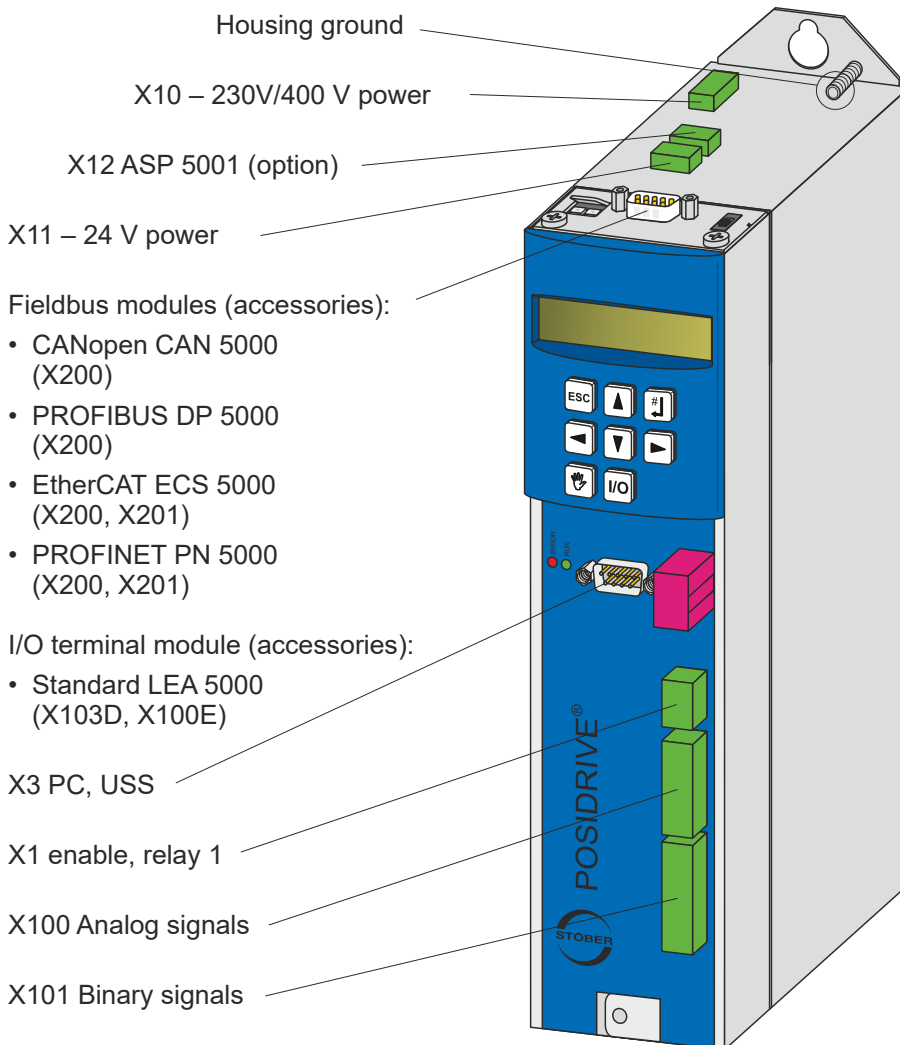

Bottom of the device

(in the example with brake module BRM 5000)

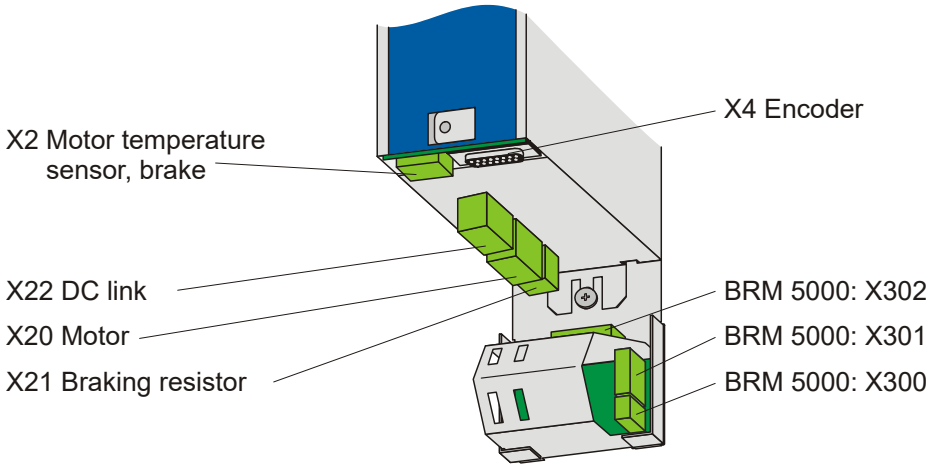

Minimum tightening torque M_{\min} – screw-type terminals

Size	0		1		2		3	
Unit	[Nm]	[lb-in]	[Nm]	[lb-in]	[Nm]	[lb-in]	[Nm]	[lb-in]
M_{\min}	0.5	4.4	0.5	4.4	1.2	11	2.5	22


Maximum conductor cross-section of power terminals

Size	0	1
Cross-section [mm ²]	2.5	4




4.1.1 Fieldbus modules

Top of device with fieldbus module CANopen CAN 5000

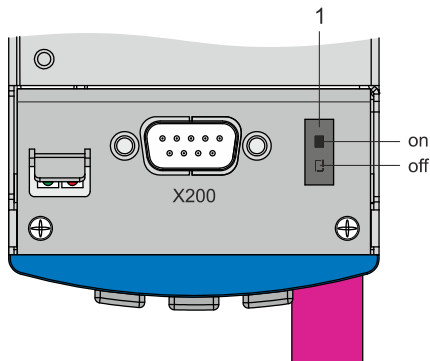


1 Internal terminating resistor 120 Ω switchable


Top of device with fieldbus module PROFIBUS DP 5000

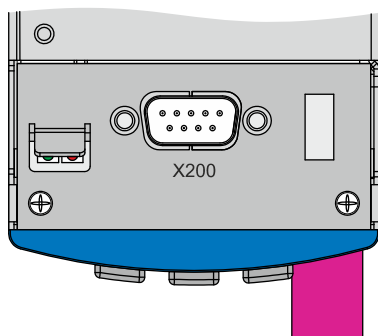


Top of device with fieldbus module EtherCAT ECS 5000

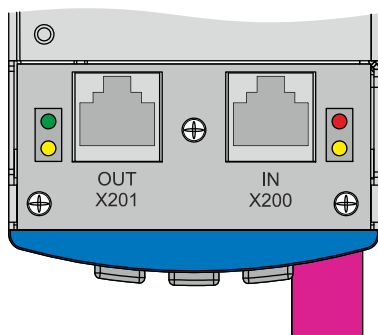

Top of device with fieldbus module PROFINET PN 5000

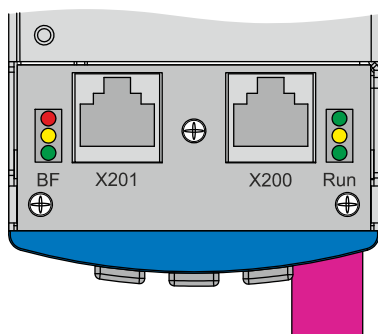

4.2 Dimensions

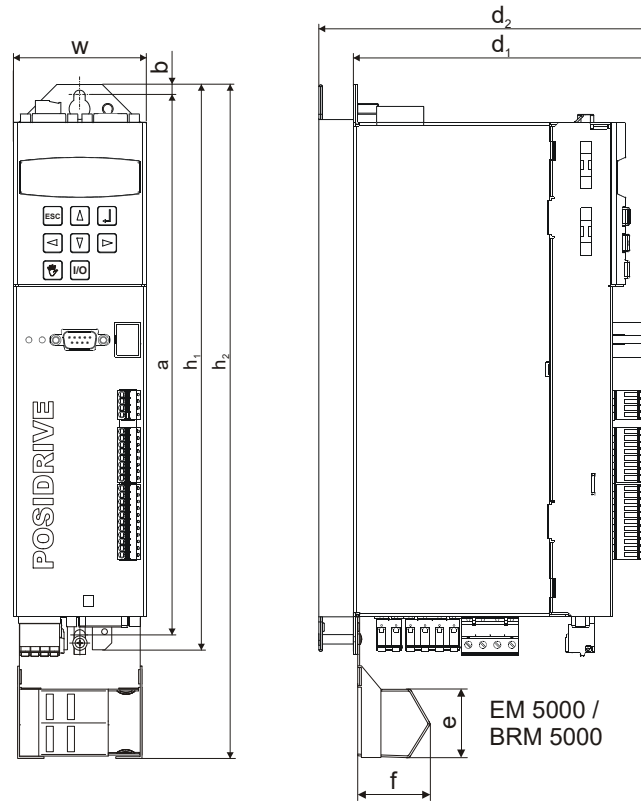


Dimensions [mm]			Size 0	Size 1
Inverter	Height	h_1	300	
		h_2 ^{a)}	360	
	Width	w	70	
	Depth	d_1	157	242
d_2 ^{b)}		175	260	
EMC shroud	Height	e	37,5	
	Depth	f	40	
Fastening holes	Vertical distance	a	283	
	Vertical distance to upper edge	b	6	

a) h_2 = Height incl. EMC shroud EM 5000 or brake module BRM 5000


b) d_2 = Depth incl. brake resistor RB 5000

4.3 Installation of the inverter in the switching cabinet


- The inverters must be installed in a control cabinet with at least protection class IP54.
- The installation location must be free of dust, corrosive vapors and all fluids (in accordance with pollution degree 2 as per EN 60204/EN 50178).
- The installation location must be free of atmospheric moisture.
- Prevent condensation, for example with anti-condensation heating elements.
- For reasons related to EMC, use mounting plates with a conductive surface (unpainted, etc.).
- Fasten the inverters onto the mounting plate with M5 screws.
- The inverters must be installed vertically:

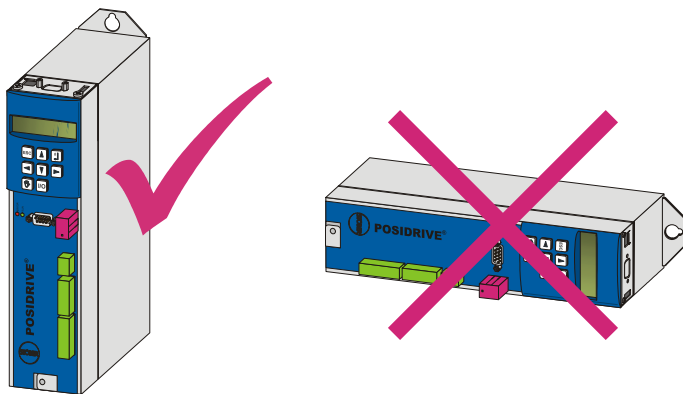

- Avoid installation above or in the immediate vicinity of heat-generating devices, e.g. output chokes or braking resistors:

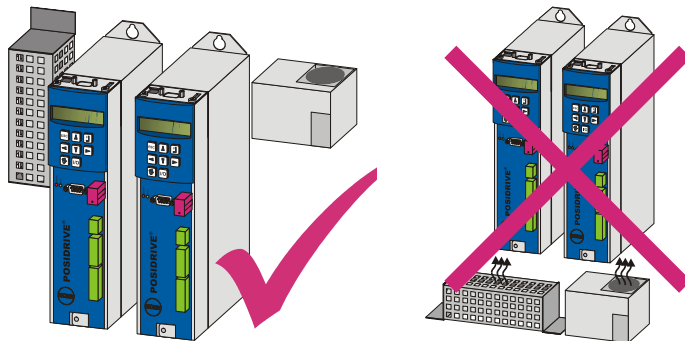

- To ensure there is sufficient air circulation in the control cabinet, observe the minimum clearances.

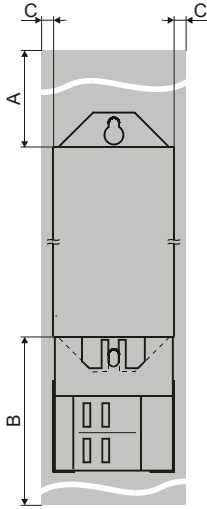

Min. clearance [dimensions in mm]	A Above	B Below	C On the side
Size 0 and size 1	100	100	5
... With EMC shroud or brake module	100	120	5


4.4 Housing ground

Note the following information on the connection of the protective earth to ground the housing correctly:

- Note the assembly sequence on the M6 earth bolts (1):
 - 2 Contact disc
 - 3 Cable socket
 - 4 Washer
 - 5 Nut

Contact disk, washer, and nuts are supplied with the inverter.

- Torque: 4 Nm
- Stray currents > 10 mA can arise in normal operation. To fulfill DIN EN 61800-5-1 and EN 60204-1, connect the earth bolts with a copper conductor according to the following table:

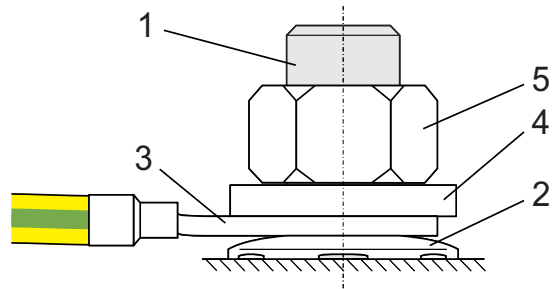

Cross-section A Feeder	Minimum cross-section A _p Earth conductor at earth bolts
$A \leq 2.5 \text{ mm}^2$	2.5 mm^2
$2.5 < A \leq 16 \text{ mm}^2$	A
$16 - 35 \text{ mm}^2$	$\geq 16 \text{ mm}^2$
$> 35 \text{ mm}^2$	A/2

4.5 Forming

NOTICE

Material damage!

The DC link capacitors in devices of sizes 0, 1 and 2 can lose their electrical strength through long storage times. Considerable material damage can arise from a reduced electrical strength of the DC link capacitors when switching on.

- Use devices in storage annually or before startup.


Perform forming for stored devices.



Information

STÖBER recommends connecting stored devices to the supply voltage according to the wiring shown for one hour every year. Please note that the inverters are designed exclusively for operation in TN networks.

The graphics below show the principle network connection for 3-phase and 1-phase devices.

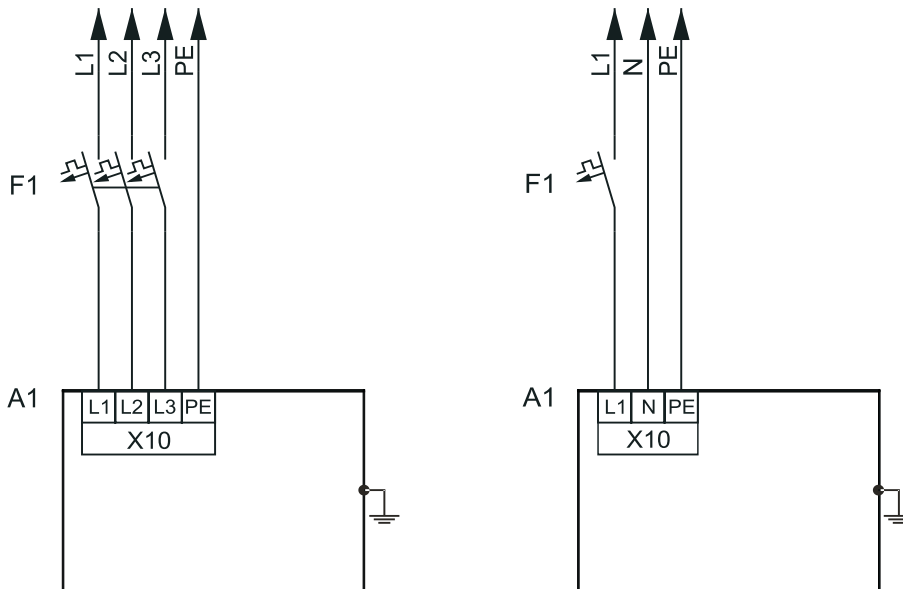


Legend

- L1–L3 = lines 1 to 3
- N = neutral conductor
- PE = protective ground
- F1 = fuse
- A1 = inverter




If annual forming is not possible, form the stored devices before commissioning according to the wiring and voltage levels shown below.

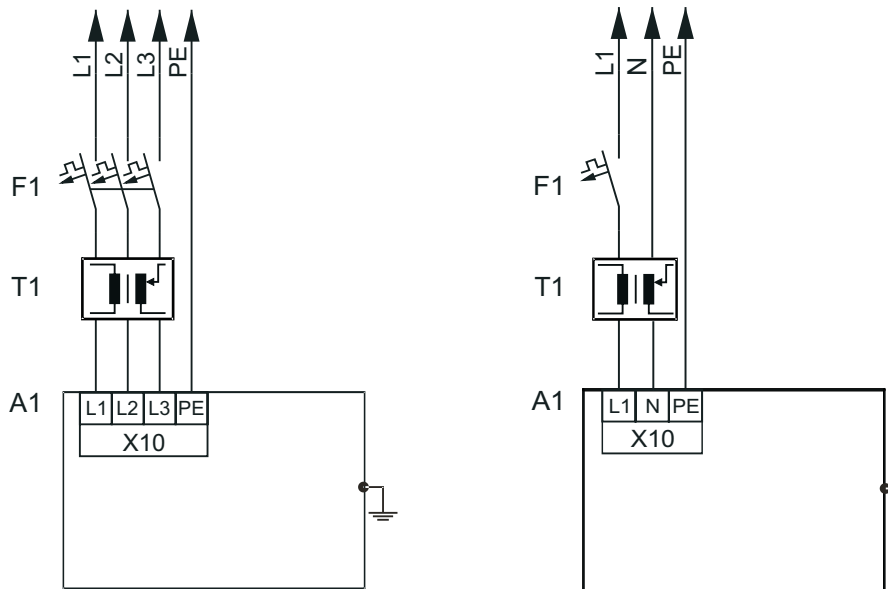

Legend

- L1–L3 = lines 1 to 3
- N = neutral conductor
- PE = protective ground
- F1 = fuse
- T1 = variable transformer
- A1 = inverter

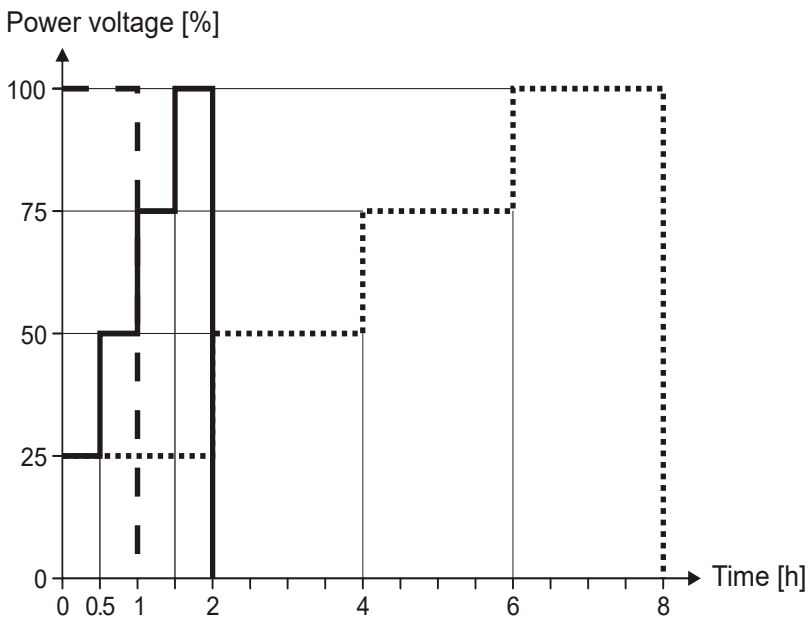

- Storage time 1 - 2 years: Before enabling, apply voltage for one hour.
- Storage time 2 - 3 years: Before enabling, form as per curve.
- Storage time ≥3 years: Before enabling, form as per curve.
- Storage time under 1 year: No action required.

5 Reinstallation

5.1 Reinstall inverter



WARNING!

Danger of personal injury and material damage due to electric shock!

- ▶ Always switch off all power supply voltage before working on the inverter! Note that the discharge time of the DC link capacitors is up to 6 minutes. You can only determine the absence of voltage after this time period.

The following requirements apply:

- A contact plan of the system in which the connection of the inverter is described must be present.

You need:

- A tool to drill the drill holes
- A tool to tighten the fastening screws

Reinstall inverter

1. Drill the drill holes in the mounting plate according to the included drill plan.
 2. Remove all terminals from the inverter.
 3. Install the accessory cards (see section 3 Install accessories).
 4. Attach the inverter to the mounting plate in the control cabinet with the upper fastening screw.
 5. Attach the inverter with the lower fastening screw.
 6. Connect the housing earth (see section 4.4 Housing ground).
 7. Attach all terminals.
 8. Connect the inverter and accessories according to the contact plan.
- ⇒ You have installed the inverter.

5.2 Reinstall inverter with bottom brake resistor

WARNING!

Danger of personal injury and material damage due to electric shock!

- ▶ Always switch off all power supply voltage before working on the inverter! Note that the discharge time of the DC link capacitors is up to 6 minutes. You can only determine the absence of voltage after this time period.

The following requirements apply:

 
- A contact plan of the system in which the connection of the inverter is described must be present.

You need:

- The M5 threaded bolts included with the bottom brake resistor
- Tool for drilling holes
- a tool to tighten the fastening screws


Reinstall inverter

1. Drill the drill holes in the mounting plate according to the included drill plan.
2. Remove all terminals on the inverter.
3. Install the accessory cards (see section 3 Install accessories).
4. Attach the bottom brake resistor to the mounting plate in the control cabinet with the threaded bolts:







- Place the inverter on the guides:

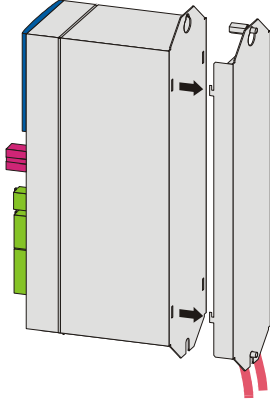

- Press the inverter down on the guides:

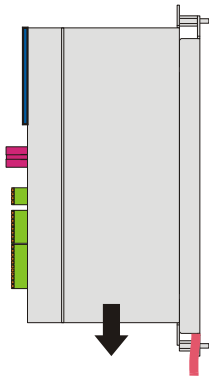

- Attach the inverter to the studs with the screws and washers:

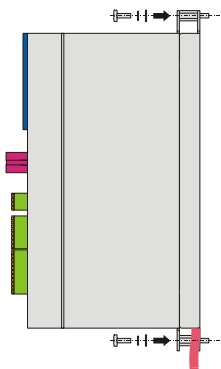

- Connect the housing ground (see section 4.4 Housing ground).
 - Attach all terminals.
 - Connect the inverter and accessories according to the contact plan.
- ⇒ You have installed the inverter.

5.3 Reinstall inverter with EMC/brake module

WARNING!

Danger of personal injury and material damage due to electric shock!

- ▶ Always switch off all power supply voltage before working on the inverter! Note that the discharge time of the DC link capacitors is up to 6 minutes. You can only determine the absence of voltage after this time period.

The following requirements apply:


- A contact plan of the system in which the connection of the inverter is described must be present.

You need:


- Tool for drilling holes
- a tool to tighten the fastening screws

Reinstall inverter


1. Drill the drill holes in the mounting plate according to the included drill plan.
2. Remove all terminals from the inverter.
3. Install the accessory cards (see section 3 Install accessories).
4. Attach the inverter on the mounting plate in the control cabinet with the upper fastening screw.
5. Insert the module into the openings at a slight angle:

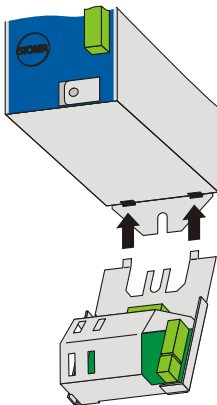

6. Press the rear of the module onto the mounting plate:

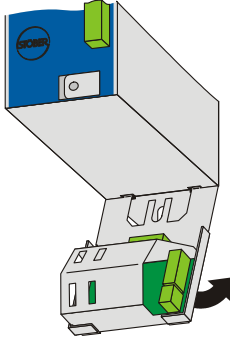

7. Fasten the module onto the mounting plate and inverter with the fastening screw and washers:

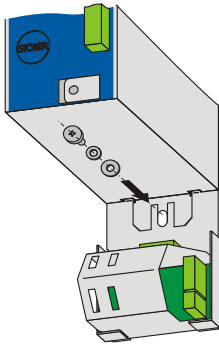

8. Connect the housing ground (see section 4.4 Housing ground).
9. Attach all terminals.
10. Connect the inverter and accessories according to the contact plan.
⇒ You have installed the inverter.

5.4 Reinstall the inverter with the bottom brake resistor and EMC/brake module

WARNING!

Danger of personal injury and material damage due to electric shock!

- ▶ Always switch off all power supply voltage before working on the inverter! Note that the discharge time of the DC link capacitors is up to 6 minutes. You can only determine the absence of voltage after this time period.

The following requirements apply:

- A contact plan of the system in which the connection of the inverter is described must be present.

You need:

- The M5 threaded bolts included with the bottom brake resistor
- a tool to drill the drill holes in the control cabinet
- a tool to tighten the fastening screws


Reinstall inverter

1. Drill the drill holes in the mounting plate according to the included drill plan.
2. Remove all terminals from the inverter.
3. Install the accessory cards (see section 3 Install accessories).
4. Attach the bottom brake resistor to the mounting plate in the control cabinet with the threaded bolts:







5. Place the inverter on the guides:

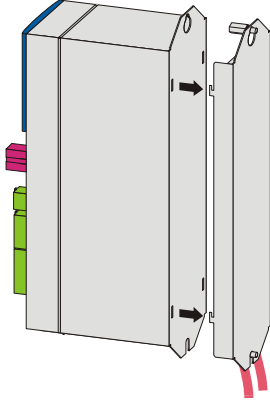

6. Press the inverter down on the guides:

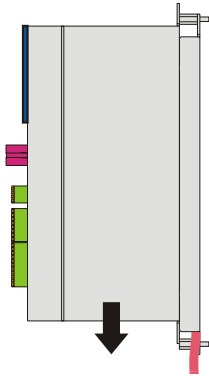

7. Attach the inverter to the upper stud with the screws and washers:

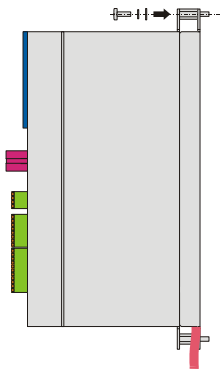


5 Reinstallation


Commissioning Instructions POSIDRIVE® FDS 5000




8. Insert the module into the openings at a slight angle:

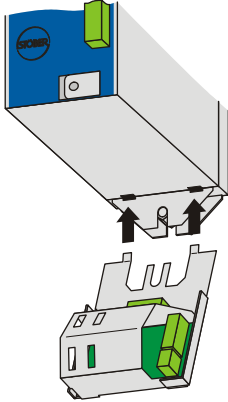

9. Press the rear of the module onto the threaded bolt of the substructure:

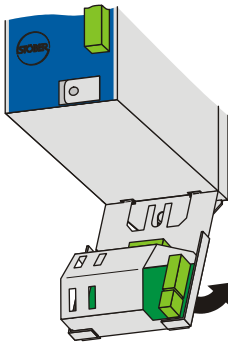

10. Attach the module to the inverter and threaded bolt with the fastening screw and washers:

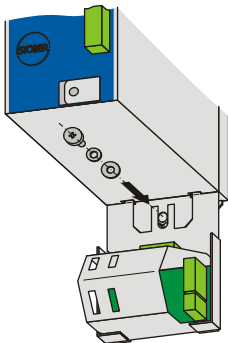

- 11. Connect the housing ground (see section 4.4 Housing ground).
 - 12. Attach all terminals.
 - 13. Connect the inverter and accessories according to the contact plan.
- ⇒ You have installed the inverter.

WE KEEP THINGS MOVING

6 Replacement



Information

Note that this section does not describe the replacement of an inverter from a DC link connection. Observe the projecting manual of the inverter for this.

The following requirements apply for each replacement:

- Inverters of the same series (MDS, SDS, FDS) and same power (5008, 5075 etc.) are replaced.
- The version of the hardware and firmware of the inverter is the same or more recent than the inverter to be disassembled.
- The circuit diagram of the machine is present.
- The Paramodule of the inverter to be disassembled is present. The original project is saved on the Paramodule.

6.1 Replacing the inverter

WARNING!

Danger of personal injury and material damage due to electric shock!


- ▶ Always switch off all power supply voltage before working on the inverter! Note that the discharge time of the DC link capacitors is up to 6 minutes. You can only determine the absence of voltage after this time period.

You need:


- A tool to undo and tighten the fastening screws

Replacing the inverter

1. Remove all terminals from the inverter that is being removed.
2. Undo the housing earth.
3. Undo the fastening screws and take the inverter out of the control cabinet.

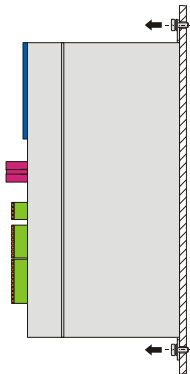


4. Remove the Paramodule from the disassembled inverter.

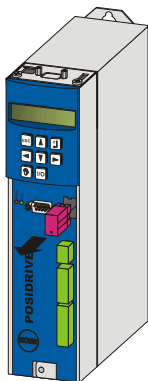




- Place the Paramodule on the inverter to be installed.

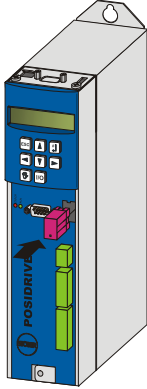

- If no accessories were supplied with the new inverter, disassemble the I/O circuit boards and fieldbus circuit boards of the disassembled inverter.
- Install the accessories in the new inverter (see section 3 Install accessories).
- Install the new inverter in the control cabinet.

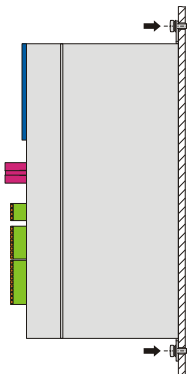

- Connect the housing earth correctly (see section 4.4 Housing ground).
 - Reattach all terminals.
- ⇒ You have replaced the inverter.

6.2 Replace the inverter with the bottom brake resistor

WARNING!

Danger of personal injury and material damage due to electric shock!


- ▶ Always switch off all power supply voltage before working on the inverter! Note that the discharge time of the DC link capacitors is up to 6 minutes. You can only determine the absence of voltage after this time period.

You need:


- A tool to undo and tighten the fastening screws

Replacing the inverter

1. Remove all terminals from the inverter that is being removed.
2. Undo the housing earth.
3. Undo the fastening screws.

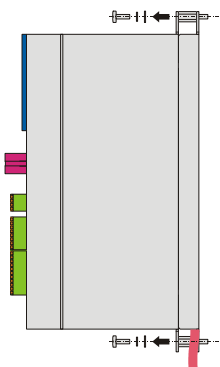


4. Press the inverter up on the guides of the bottom brake resistor and take the inverter out of the control cabinet.

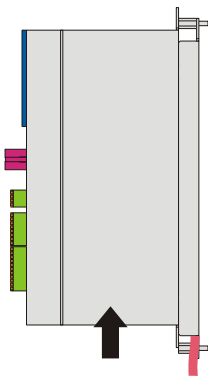





- Remove the Paramodule from the disassembled inverter.

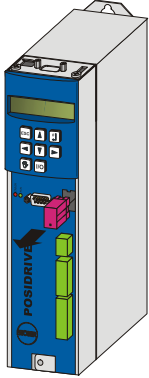

- Place the Paramodule on the inverter to be installed.

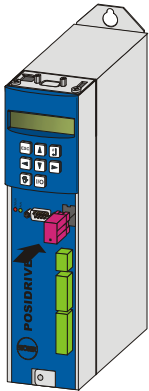


- If no accessories were supplied with the new inverter, disassemble the I/O circuit boards and fieldbus circuit boards of the disassembled inverter.

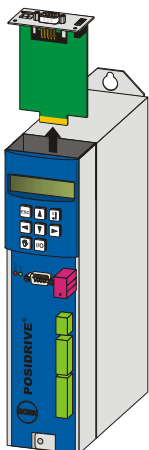


- Install the accessories in the new inverter (see section 3 Install accessories).


9. Place the inverter on the guides:

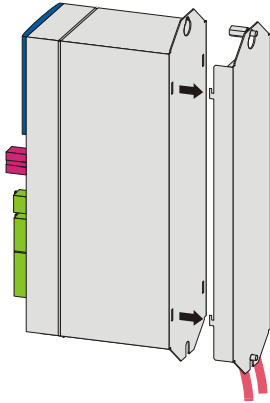

10. Press the inverter down on the guides:

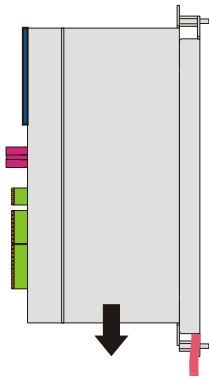

11. Attach the inverter to the studs with the screws and washers:

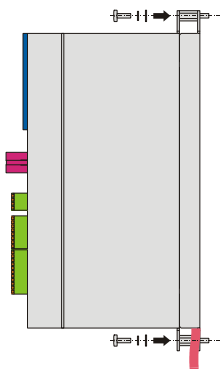

12. Connect the housing earth correctly (see section 4.4 Housing ground).

13. Reattach all terminals.

⇒ You have replaced the inverter.

6.3 Replace the inverter with EMC/brake module

WARNING!

Danger of personal injury and material damage due to electric shock!


- ▶ Always switch off all power supply voltage before working on the inverter! Note that the discharge time of the DC link capacitors is up to 6 minutes. You can only determine the absence of voltage after this time period.

You need:


- A tool to undo and tighten the fastening screws

Replacing the inverter


1. Remove all terminals from the inverter that is being removed.
2. Undo the housing earth.
3. Undo the lower fastening screw.

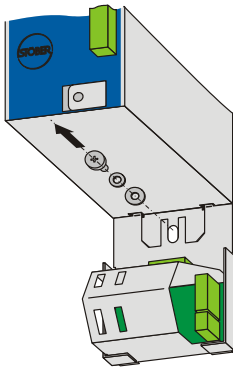


4. Slightly push the lower edge of the module away from the control cabinet wall:

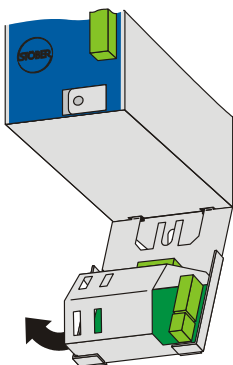


5. Remove the module by pushing slightly up at an angle:

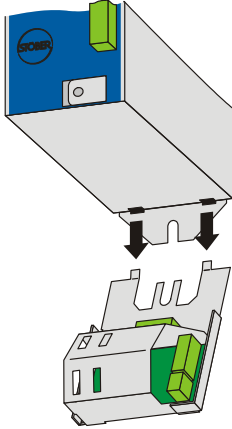

6. Undo the upper fastening screw and take the inverter out of the control cabinet.
7. Remove the Paramodule from the disassembled inverter.

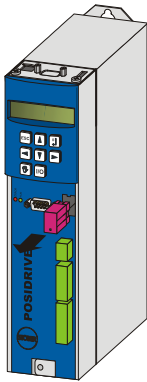


8. Place the Paramodule on the inverter to be installed.

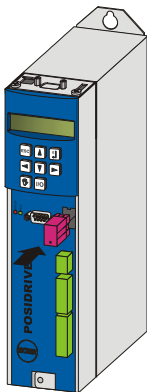



9. If no accessories were supplied with the new inverter, disassemble the I/O circuit boards and fieldbus circuit boards of the disassembled inverter.

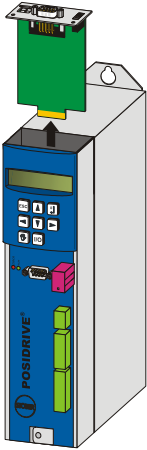

10. Install the accessories in the new inverter (see section 3 Install accessories).
 11. Attach the inverter to the top of the control cabinet with the screw and washers:
 12. Attach the EMC shroud or brake module to the new inverter (see section 5.3 Reinstall inverter with EMC/brake module, steps 5 to 7).
 13. Connect the housing earth correctly (see section 4.4 Housing ground).
 14. Reattach all terminals.
- ⇒ You have replaced the inverter.

6.4 Replace the inverter with bottom brake resistor and EMC/brake module

WARNING!

Danger of personal injury and material damage due to electric shock!


- ▶ Always switch off all power supply voltage before working on the inverter! Note that the discharge time of the DC link capacitors is up to 6 minutes. You can only determine the absence of voltage after this time period.

You need:


- A tool to undo and tighten the fastening screws

Replacing the inverter

1. Remove all terminals from the inverter that is being removed.
2. Undo the housing earth.
3. Undo the lower fastening screw.

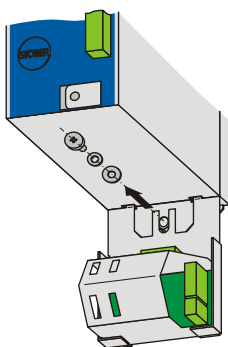


4. Slightly push the lower edge of the module away from the control cabinet wall:

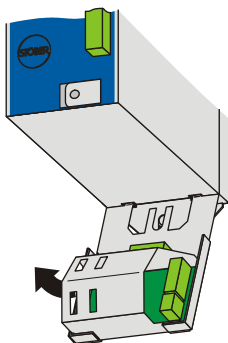





5. Remove the module by pushing slightly up at an angle:

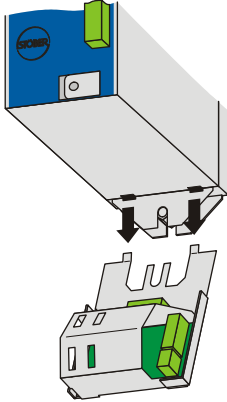


6. Undo the upper fastening screw.

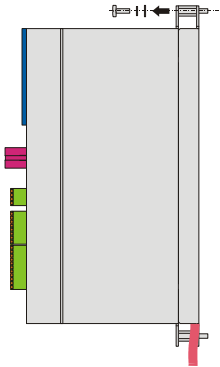


7. Press the inverter up on the guides of the bottom brake resistor and take the inverter out of the control cabinet.

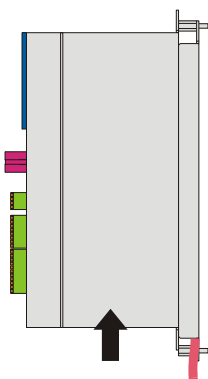


8. Remove the Paramodule from the disassembled inverter.

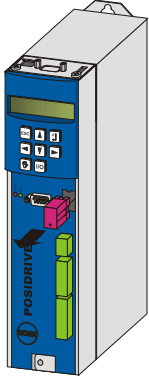

9. Place the Paramodule on the inverter to be installed.

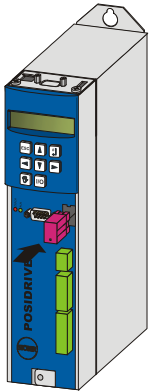


10. If no accessories were supplied with the new inverter, disassemble the I/O circuit boards and fieldbus circuit boards of the disassembled inverter.

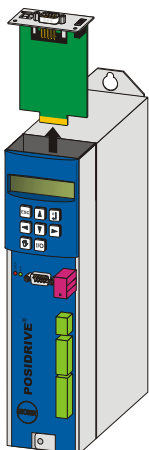


11. Install the accessories in the new inverter (see section 3 Install accessories).




12. Place the inverter on the guides:

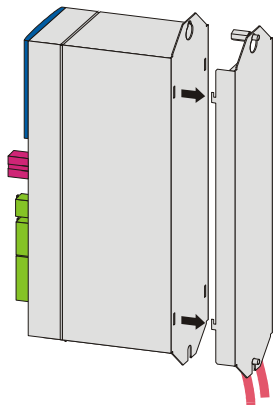

13. Press the inverter down on the guides:

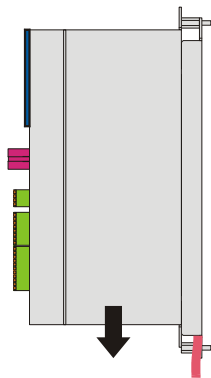

14. Attach the inverter to the upper stud with the screws and washers:

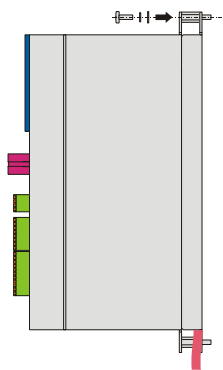

15. Attach the EMC shroud or brake module to the new inverter (see section 5.3 Reinstall inverter with EMC/brake module, steps 5 to 7).

16. Connect the housing earth correctly (see section 4.4 Housing ground).

17. Reattach all terminals.

⇒ You have replaced the inverter.



Address registers

Always up to date on the internet: www.stober.com (Contact)

- Technical offices for advice and marketing in Germany
- Global presence for advice and marketing in about 25 countries
- Service network Germany
- Service network international

- STÖBER subsidiaries:

USA

STÖBER DRIVES INC.
1781 Downing Drive
41056 Maysville
Fon +1 606 759 5090
sales@stober.com
www.stober.com

Austria

STÖBER ANTRIEBSTECHNIK
GmbH
Hauptstraße 41a
4663 Laakirchen
Fon +43 7613 7600-0
sales@stoeber.at
www.stoeber.at

United Kingdom

STÖBER DRIVES LTD.
Centrix House
Upper Keys Business Village
Keys Park Road, Hednesford
Cannock | Staffordshire WS12 2HA
Fon +44 1543 458 858
sales@stober.co.uk
www.stober.co.uk

Turkey

STÖBER Turkey
Istanbul
Fon +90 212 338 8014
sales-turkey@stober.com
www.stober.com

Switzerland

STÖBER SCHWEIZ AG
Rugghözli 2
5453 Remetschwil
Fon +41 56 496 96 50
sales@stoeber.ch
www.stoeber.ch

France

STÖBER S.a.r.l.
131, Chemin du Bac à Traille
Les Portes du Rhône
69300 Caluire-et-Cuire
Fon +33 4 78.98.91.80
sales@stober.fr
www.stober.fr

China

STÖBER China
German Centre Beijing Unit 2010,
Landmark Tower 2 8 North
Dongsanhuan Road
Chaoyang District BEIJING 10004
Fon +86 10 6590 7391
sales@stoeber.cn
www.stoeber.cn

Taiwan

STÖBER Branch Office Taiwan
sales@stober.tw
www.stober.tw

Italy

STÖBER TRASMISSIONI S. r. l.
Via Italo Calvino, 7 Palazzina D
20017 Rho (MI)
Fon +39 02 93909570
sales@stober.it
www.stober.it

South East Asia

STÖBER South East Asia
sales@stober.sg
www.stober.sg

Japan

STÖBER JAPAN K. K.
Elips Building 4F, 6 chome 15-8,
Hon-komagome, Bunkyo-ku
113-0021 Tokyo
Fon +81 3 5395 6788
sales@stober.co.jp
www.stober.co.jp



STÖBER Antriebstechnik GmbH + Co. KG

Kieselbronner Str. 12
75177 PFORZHEIM
GERMANY
Fon +49 7231 582-0
mail@stoerber.de

24 h Service Hotline +49 7231 5823000

www.stoerber.com

Technische Änderungen vorbehalten
Errors and changes excepted
ID 442293.08
08/2020



4 4 2 2 9 3 . 0 8