

## 1 Safety information

### 1.1 General safety instructions

**WARNING!**

**When connecting and operating the motors considerable hazards to the life and health of persons may occur!**

- ▶ When connecting the motor observe the following safety instructions, the operating instructions for the motor and applicable national, local and system-specific regulations.

### 1.2 Safety when making the electrical connection

**WARNING!**

**Electrical shock by touching live unpainted parts of the motor!**

- ▶ The electrical connection of the motor may only be carried out by a qualified electrician.
- ▶ Before connecting the motor, switch the relevant system or machine to zero potential with the main switch and protect the main switch against being turned on again!
- ▶ Close the entire connector housing before turning on the motor.
- ▶ Do not touch the motor connections while the motor shaft is rotating, as due to the built-in permanent magnets a voltage is applied to the motor connections.

### 1.3 Avoid connection errors

**NOTICE**

**Electrical connection errors can cause damage to the motor and its components.**

- ▶ Make sure that the cables and connectors to be connected meet this motor connection plan.
- ▶ Carefully note the information on the motor name plate and this motor connection plan. For questions please contact STÖBER Service department.

### 1.4 Safe function and EMC of the drive system

**NOTICE**

**If connection cables or a drive controller that are not designed for the motor are used to make the electrical connection for the motor, this may result in damage to the motor or that compliance with the legal requirements for EMC is no longer provided and claims under the warranty will be null and void.**

- ▶ You should use connection cables and a drive controller specifically designed for your motor from the STÖBER product range.

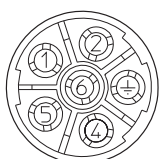
### 1.5 Applied standards

Colors are coded as per IEC 60757 and are only relevant for the internal motor connection strands.

## Motor Connection Plan ED\_FA / EK\_FA to SDS 4000 / Compatible

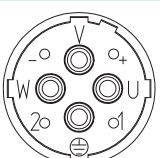
## 2 Motor connection

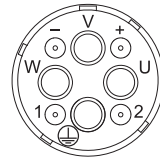
### 2.1 Power connection via connector

Connection diagram	Pin	Designation	Color
 <p>Size con.23 (1)</p>	1	1U1 (phase U)	BK
	2	1V1 (phase V)	BU
	4	1BD1 <sup>1)</sup>	
	5	1BD2 <sup>1)</sup>	
	6	1W1 (phase W)	RD
	⊕	Protective conductor	GNYE

1) see chapter "Motor holding brake"

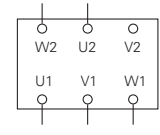
1) see chapter "Motor holding brake"

Connection diagram	Pin	Connection	Color
 <p>Size con.40 (1.5)</p>	R	1U1 (phase U)	BK
	V	1V1 (phase V)	BU
	W	1W1 (phase W)	RD
	+	1BD1 <sup>1)</sup>	
	-	1BD2 <sup>1)</sup>	
	1		
	2		
⊕	Protective ground (PE)	GNYE	

Connection diagram	Pin	Connection	Color
 <p>Size con.58 (3)</p>	U	1U1 (phase U)	BK
	V	1V1 (phase V)	BU
	W	1W1 (phase W)	RD
	+	1BD1 <sup>1)</sup>	
	-	1BD2 <sup>1)</sup>	
	1		
	2		
⊕	Protective conductor	GNYE	

1) see chapter "Motor holding brake"

### 2.2 Power connection via terminal box (optional)

Connection diagram	Pin	Designation	Color
	U1	1U1 (phase U)	BK
	V1	1V1 (phase V)	BU
	W1	1W1 (phase W)	RD
	W2	1BD1 <sup>1)</sup>	
	U2	1BD2 <sup>1)</sup>	
	V2		
	⊕	Protective conductor	GNYE

1) see chapter "Motor holding brake"

2.3 Temperature sensor

**NOTICE**

The temperature sensor can be damaged by electrical connection errors!

- Carefully note the type of the temperature sensor indicated on the motor name plate.

PTC thermistor 145° C (standard)		
Abbreviation		Color
1TP1		BK
1TP2		WH

KTY 84-130 temperature sensor (optional)		
Abbreviation	Designation	Color
1K1	+	BN
1K2	-	WH (GY)

2.4 Motor holding brake (optional)

**NOTICE**

The brake can be damaged by electrical connection errors!

- When connecting the brake, carefully note the polarity of the connections and the supply voltage of the brake.

Permanent magnet brake (P)		
Abbreviation	Designation	Color
1BD1	DC 24 V ± 5 % (smoothed)	RD
1BD2	0 V (GND)	BK


Spring-applied brake (F)		
Abbreviation	Designation	Color
1BD1	DC 24 V ± 10 %	RD
1BD2	0 V (GND)	BK

2.5 External fan connection (optional)

**NOTICE**

The external fan motor can be damaged by electrical connection errors!

- Check before making the connection whether the connection values and terminal assignment of the external fan motor match those shown below.

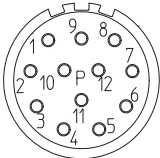
Connection diagram	Pin	Designation
	1	L1 (230 V ± 5 %, 50/60 Hz)
	2	N
	3	
		Protective conductor

2.6 Encoder connection via connector

**NOTICE**

The encoder can be damaged by electrical connection errors!

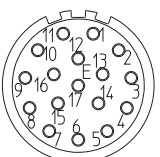
- Check before making the connection, whether the type of the encoder specified on the name plate of the motor is correctly set in the drive controller.

Resolver			
Connection diagram	Pin	Signal	Color
	1	S3 Cos +	BK
	2	S1 Cos -	RD
	3	S4 Sin +	BU
	4	S2 Sin -	YE
	5	1TP1 / 1K1 <sup>2)</sup>	
	6	1TP2 / 1K2 <sup>2)</sup>	
	7	R2 Ref +	YEW <sup>3)</sup>
	8	R1 Ref -	RDWH
	9		
	10		
	11		
	12		

2) see chapter "Temperature sensor"

3) or BKWH (depending on resolver manufacturer)

Absolute value encoder EnDat 2.1 with Sin/Cos incremental signals

Connection diagram	Pin	Signal	Color
	1	Up sense	BU
	2		
	3		
	4	0 V sense	WH
	5	1TP1 / 1K1 <sup>2)</sup>	
	6	1TP2 / 1K2 <sup>2)</sup>	
	7	Up +	BNGN
	8	Clock +	VT
	9	Clock -	YE
	10	0 V GND	WHGN
	11		
	12	B + (Sin +)	BUBK
	13	B - (Sin -)	RDBK
	14	Data +	GY
	15	A + (Cos +)	GNBK
	16	A - (Cos -)	YEBK
	17	Data -	PK

2) see chapter "Temperature sensor"