


Replacement parts list

K1 helical bevel gear unit

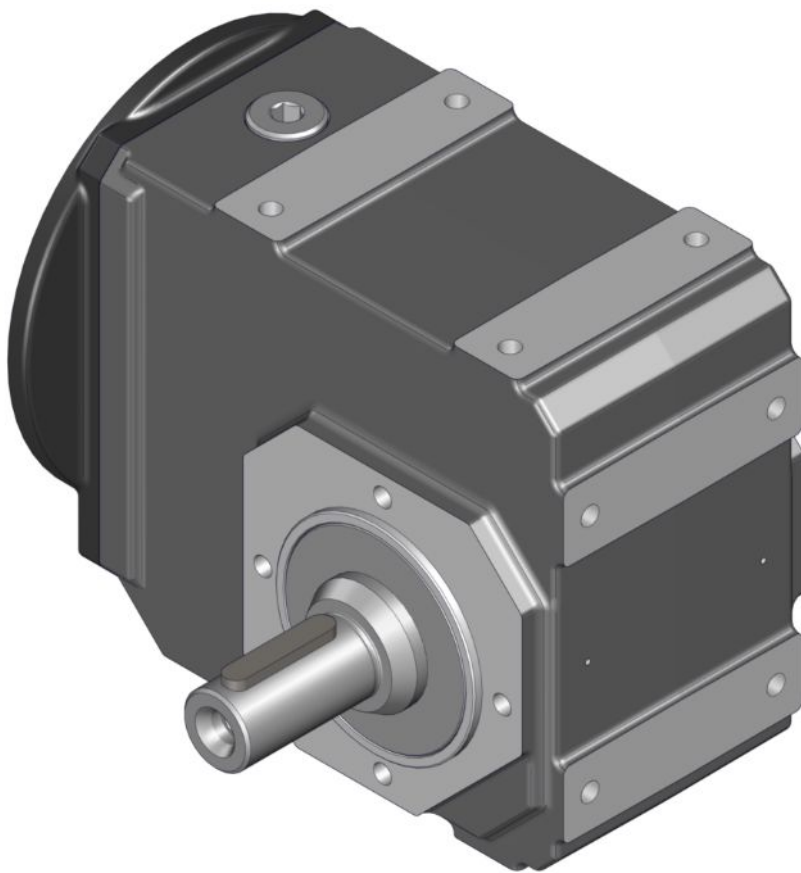

[stober.com](https://www.stober.com)

en-US
09/2018
ID 443132_en.00

1	User information.....	3
1.1	Type designation	3
1.2	Nameplate.....	4
1.3	Additional documentation	4
2	Shafts.....	5
2.1	Overview of shafts	5
2.2	Hollow shaft	6
2.3	Hollow shaft with shrink disk	7
2.4	Solid shaft.....	8
2.5	Solid shaft on both sides	9
2.6	Solid shaft for attachment of P, PH planetary gear unit	10
2.7	Pinion shaft	11
3	Housing types	12
3.1	Housing with flange, torque arm and baseboards.....	12
3.2	Housing with flange for attachment of P, PH planetary gear units.....	13
4	Motor connection flange.....	14
4.1	Two-stage gear unit	14

1 User information

This replacement parts list is intended to make ordering replacement parts easier; however, it cannot replace repair instructions.

Have the gear unit repaired only by STOBBER service or STOBBER service partners. Only use replacement parts delivered by STOBBER. Be aware that improper repair work may cause material damage and may void the manufacturer's warranty.

All standard versions of the gear unit are presented in this document. Using the nameplate, the type designation and your order documents, you can find the chapters that correspond to your product. Places where a shim is pictured in the images may require multiple shims of varying thicknesses, depending on the tolerance.

Specify the type designation and serial number of the gear unit as well as the corresponding item number from this replacement parts list when ordering replacement parts.

1.1 Type designation

Sample code

K	4	0	3	A	G	0100	EZ
----------	----------	----------	----------	----------	----------	-------------	-----------


Explanation

Code	Designation	Design
K	Type	Helical bevel gear unit
4	Size	4 (example)
0	Generation	Generation 0
2	Stages	Two-stage
3		Three-stage
A	Shaft	Hollow shaft with keyway
S		Hollow shaft with shrink disk
V		Solid shaft
G	Housing	Pitch circle diameter
F		Round flange
NG		Foot + pitch circle diameter
NF		Foot + round flange
GD		Pitch circle diameter + torque arm
NGD		Foot + pitch circle diameter + torque arm
0100	Transmission ratio (i x 10)	i = 10 (example)
AW	Attachment groups	AW drive shaft
D		D asynchronous motor
ED		ED/EK synchronous servo motor
EZ		EZ synchronous servo motor
IE2D		IE2 asynchronous motor
MB		MB motor adapter with brake
ME		ME motor adapter with EasyAdapt coupling
MQ		MQ square motor adapter
MR		MR round motor adapter
R		R variable speed gear unit

The type designation of PK and PHK gear units (planetary gear unit combined with K helical bevel gear unit) is explained in the documentation for the PH or PHK gear units.

1.2 Nameplate

An example gear unit nameplate is explained in the figure below.

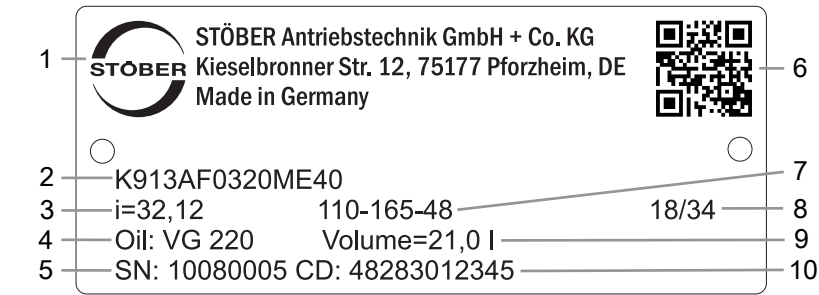


1	Name of manufacturer	2	Type designation
3	Gear ratio of the gear unit	4	Lubricant specification
5	Serial number of the gear unit	6	QR code (link to product information)
7	Dimensions of the motor adapter	8	Date of manufacture (year/calendar week)
9	Lubricant fill volume	10	Customer-specific data

1.3 Additional documentation

Additional documentation related to the product can be found by entering the serial number of the product at <https://id.stober.com> or by scanning the QR code on the type plate of the product.

2 Shafts


2.1 Overview of shafts

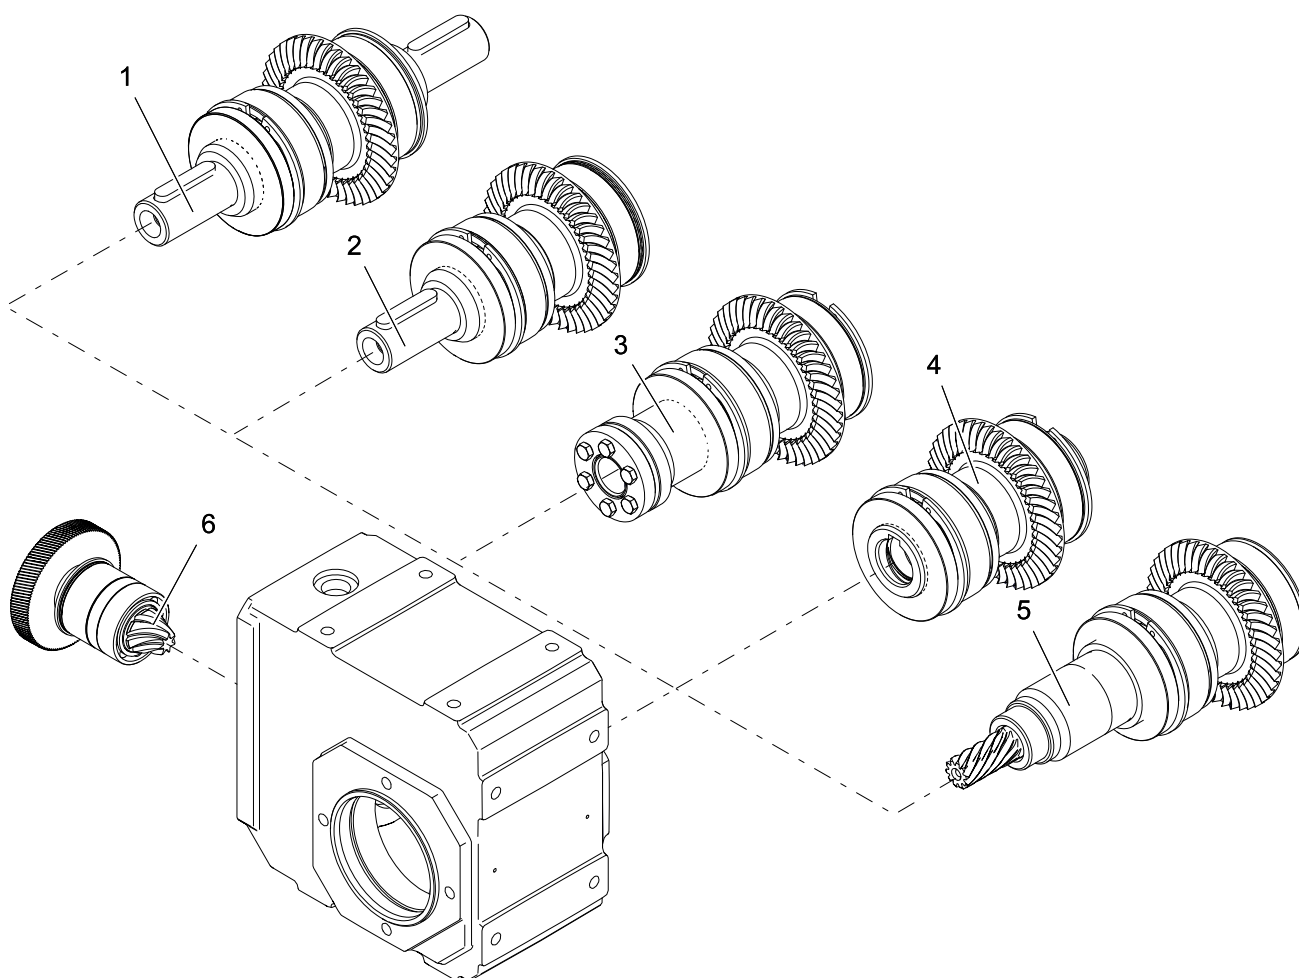

No.	Designation	No.	Designation
1	Solid shaft on both sides	2	Solid shaft
3	Hollow shaft with shrink disk	4	Hollow shaft
5	Solid shaft for attachment to P/PH	6	Pinion shaft


The shafts can also be installed turned by 180° based on the order (except for the pinion shaft).

2.2 Hollow shaft

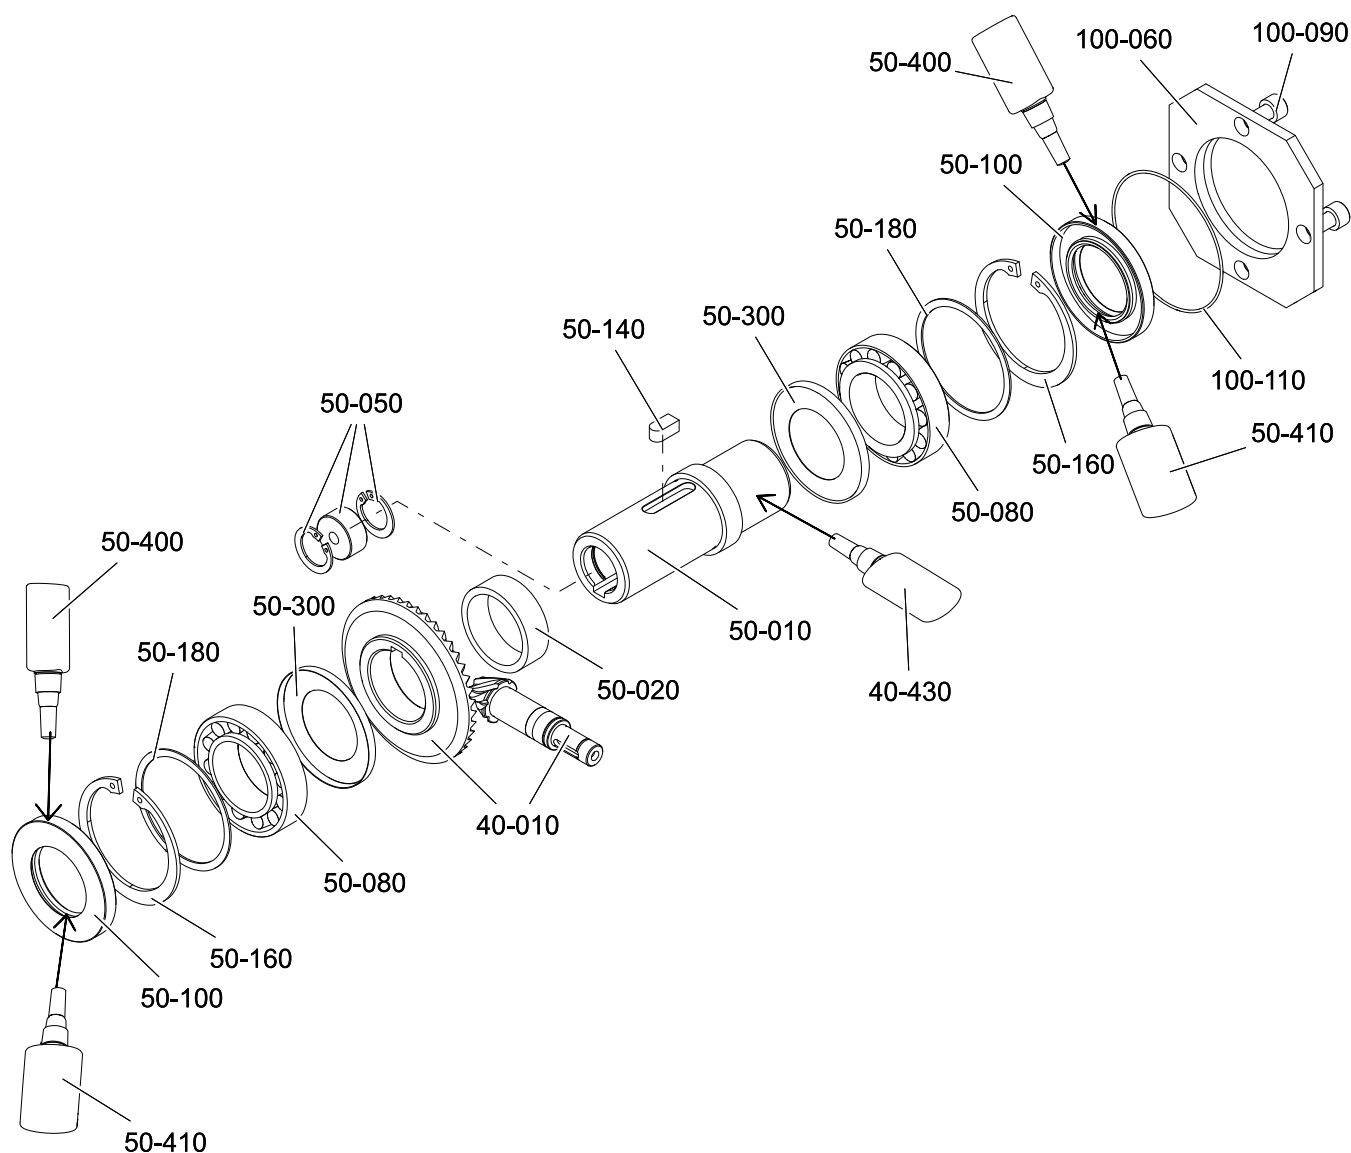


Item No.	Designation	Item No.	Designation
40-010	Pinion shaft with crown gear	40-430	Adhesive
50-010	Hollow shaft	50-020	Spacer bushing
50-050	Dismounting disk (complete)	50-080	Rolling bearing
50-100	Shaft seal ring	50-140	Feather key
50-160	Retaining ring	50-180	Shim
50-300	Nilos ring (for EL3/EL4 installation position)	50-400	Adhesive (for FKM shaft seal rings)
50-410	Lubricant	100-060	Cover (optional)
100-090	Cylinder screw (optional)	100-110	O-ring (optional)

2.3 Hollow shaft with shrink disk

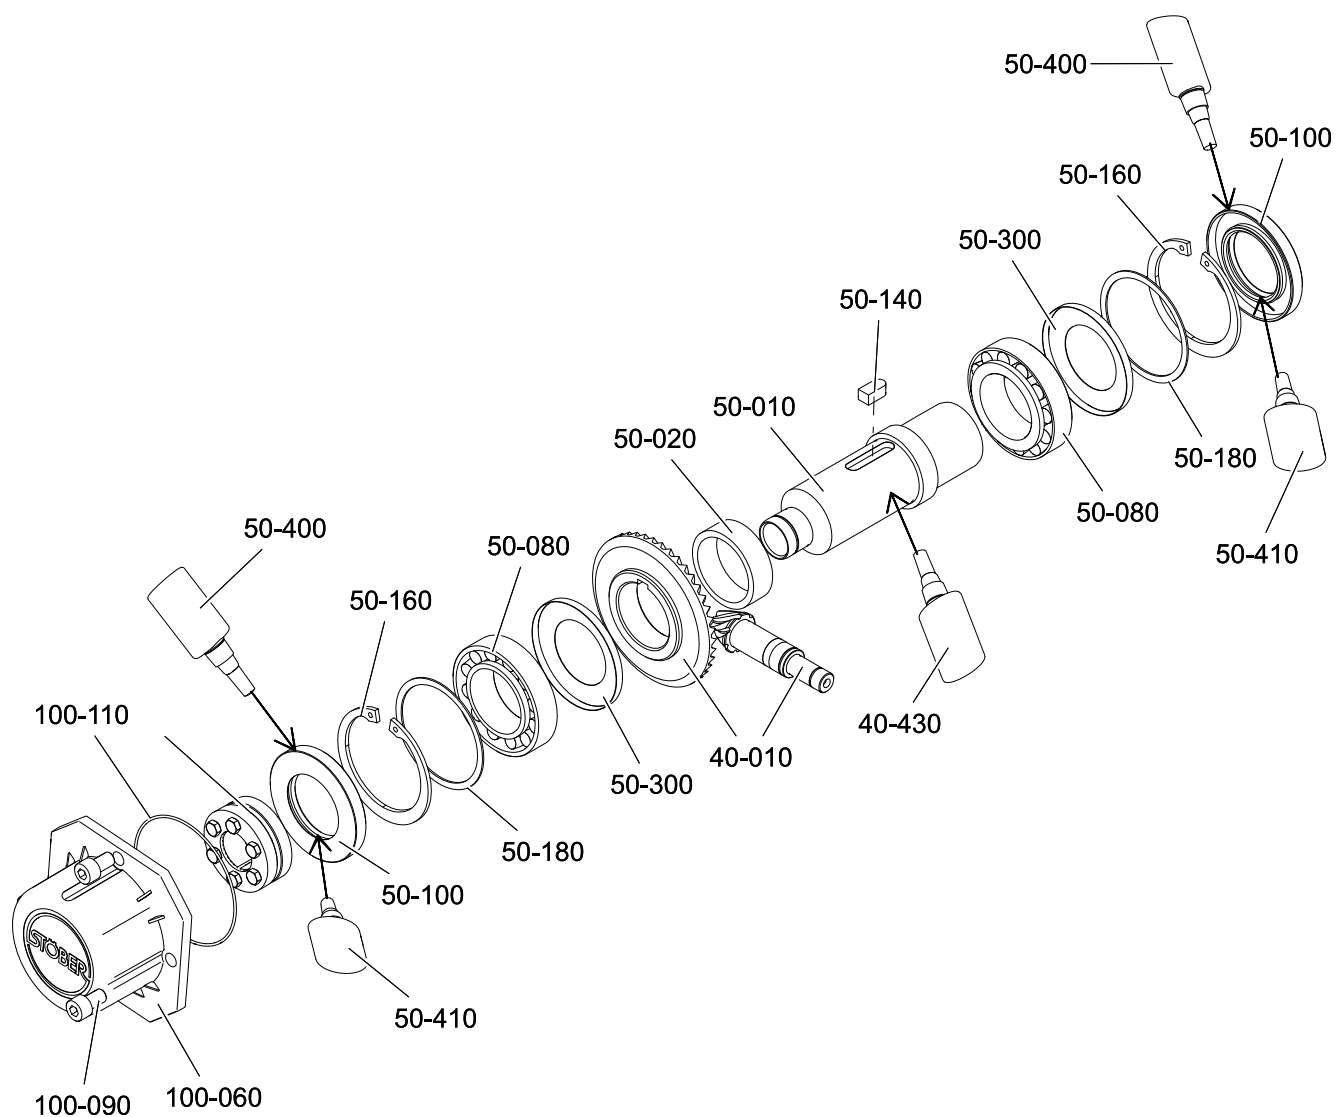


Item No.	Designation	Item No.	Designation
40-010	Pinion shaft with crown gear	40-430	Adhesive
50-010	Hollow shaft	50-020	Spacer bushing
50-080	Rolling bearing	50-100	Shaft seal ring
50-140	Feather key	50-160	Retaining ring
50-180	Shim	50-300	Nilos ring (for EL3/EL4 installation position)
50-400	Adhesive (for FKM shaft seal rings)	50-410	Lubricant
90-010	Shrink disk (complete)	100-060	Cover (optional)
100-090	Cylinder screw (optional)	100-110	O-ring (optional)

2.4 Solid shaft

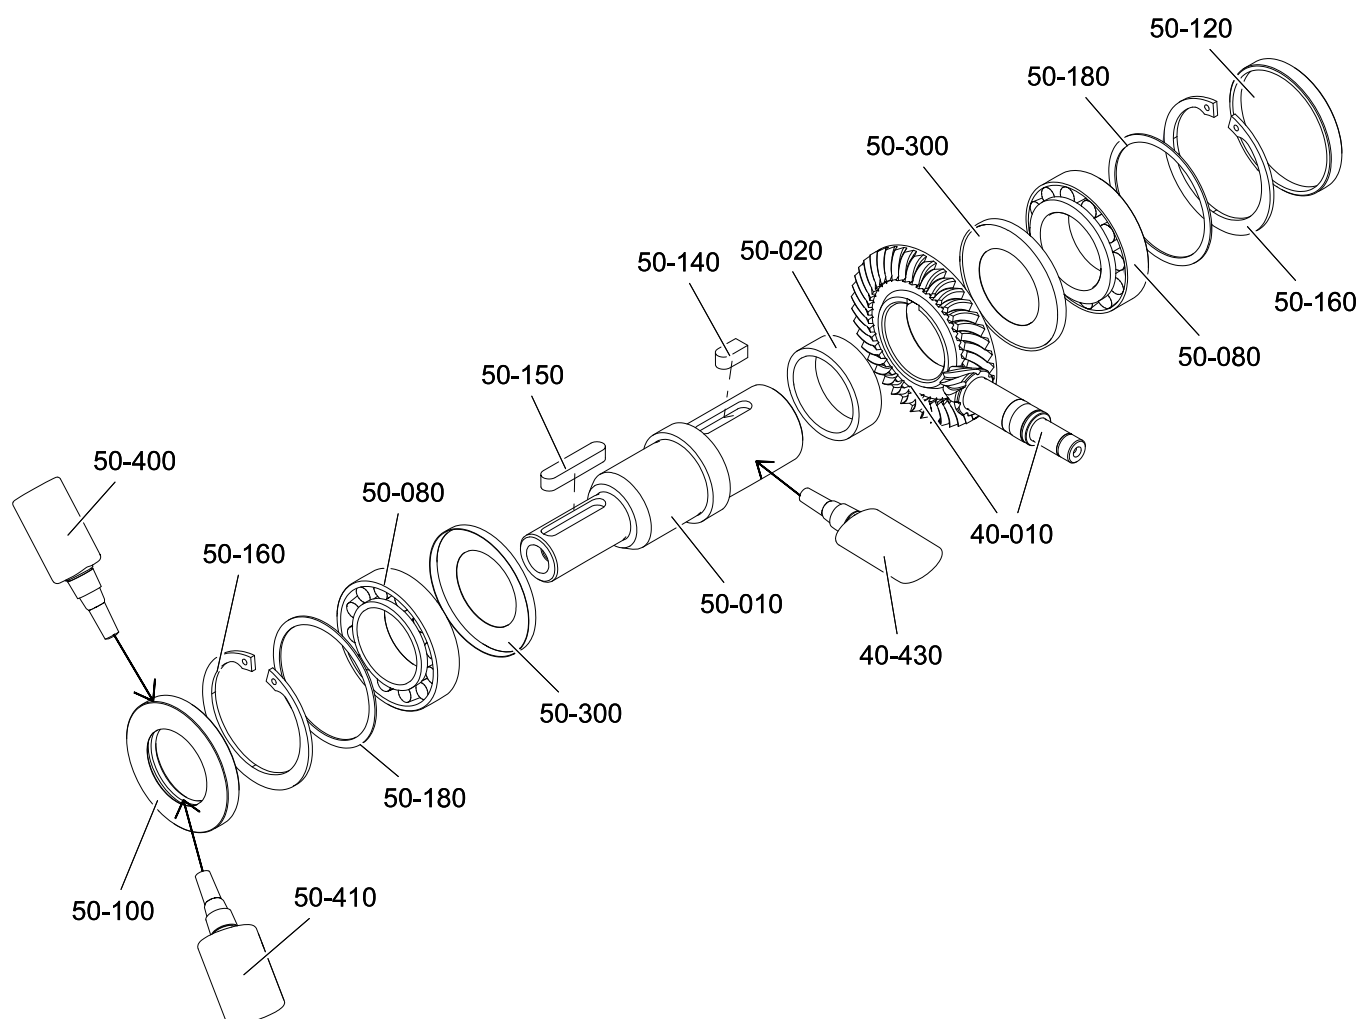


Item No.	Designation	Item No.	Designation
40-010	Pinion shaft with crown gear	40-430	Adhesive
50-010	Solid shaft	50-020	Spacer bushing
50-080	Rolling bearing	50-100	Shaft seal ring
50-120	Sealing cap	50-140	Feather key
50-150	Feather key	50-160	Retaining ring
50-180	Shim	50-300	Nilos ring (for EL3/EL4 installation position)
50-400	Adhesive (for FKM shaft seal rings)	50-410	Lubricant

2.5 Solid shaft on both sides

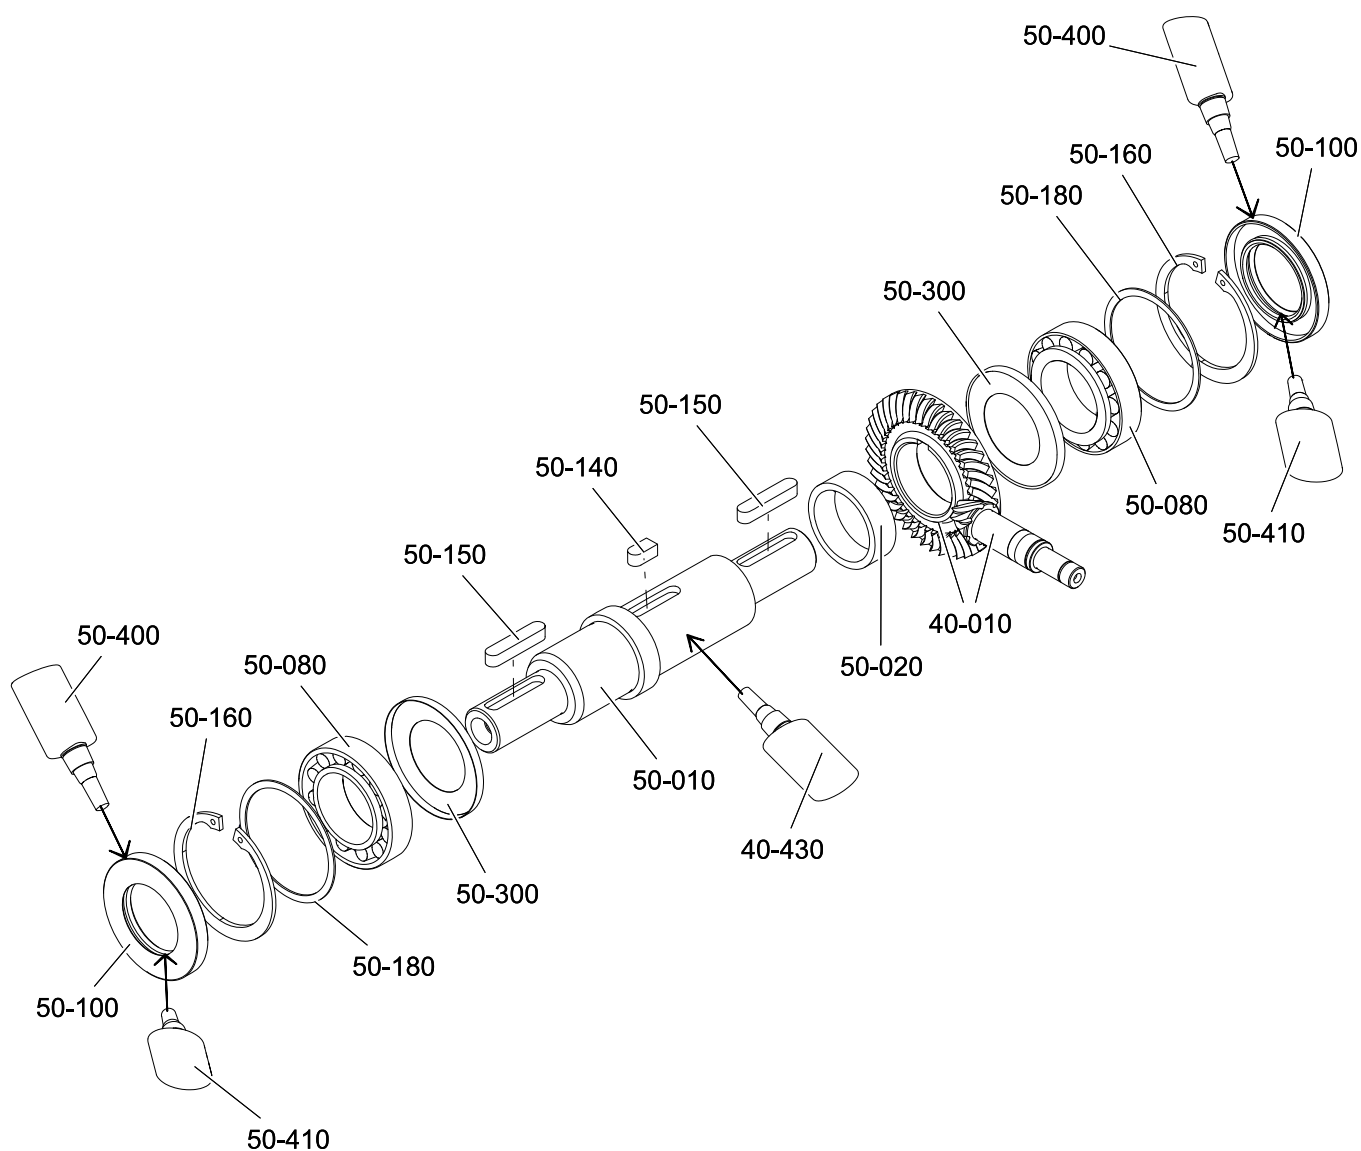


Item No.	Designation	Item No.	Designation
40-010	Pinion shaft with crown gear	40-430	Adhesive
50-010	Solid shaft	50-020	Spacer bushing
50-080	Rolling bearing	50-100	Shaft seal ring
50-140	Feather key	50-150	Feather key
50-160	Retaining ring	50-180	Shim
50-300	Nilos ring (for EL3/EL4 installation position)	50-400	Adhesive (for FKM shaft seal rings)
50-410	Lubricant		

2.6 Solid shaft for attachment of P, PH planetary gear unit

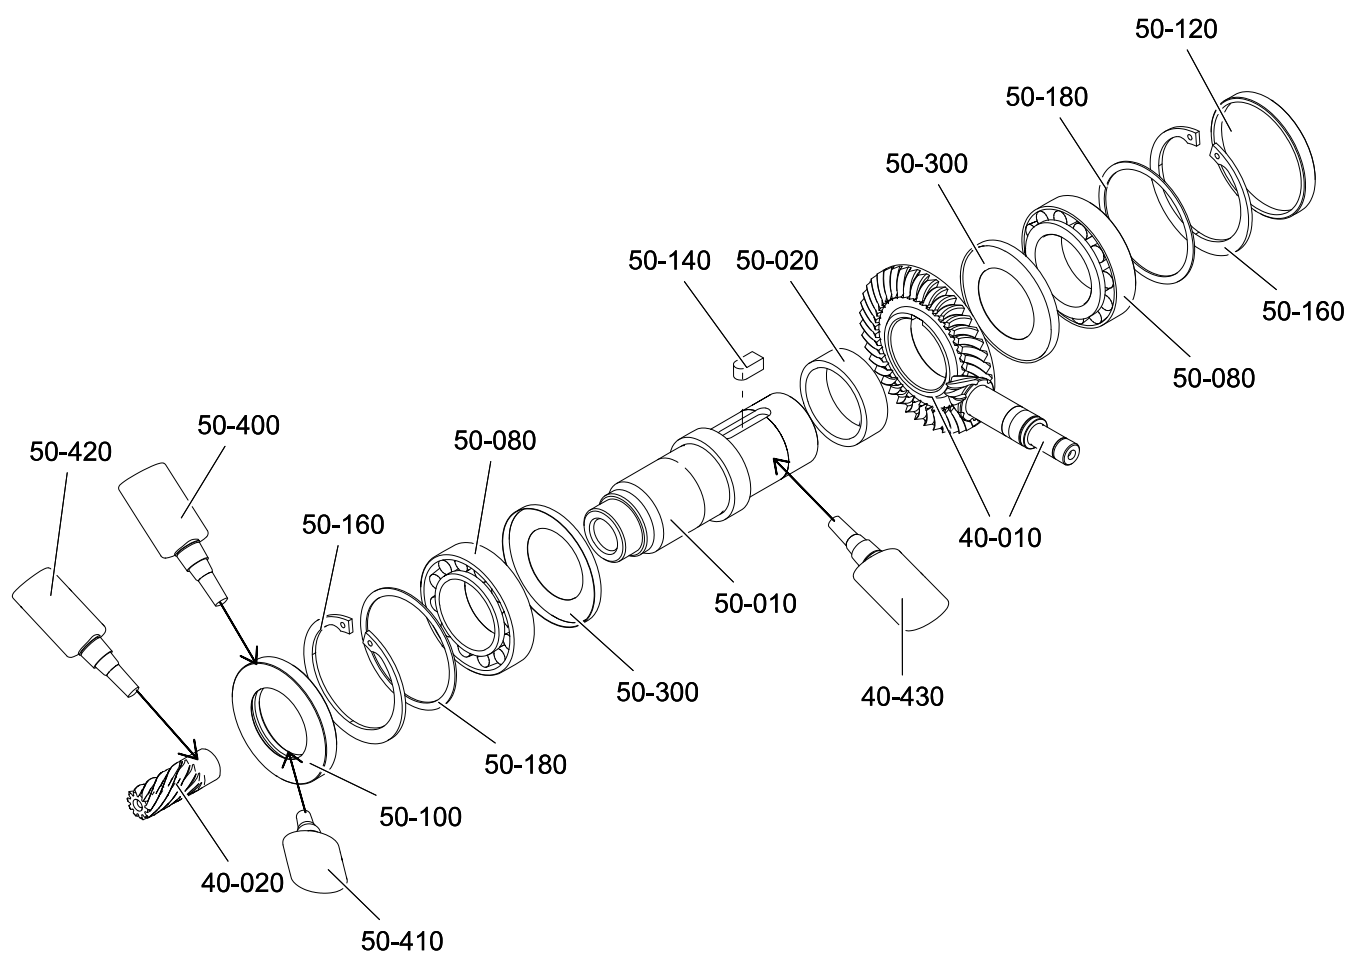

Item No.	Designation	Item No.	Designation
40-010	Pinion shaft with crown gear	40-020	Pinion
40-430	Adhesive	50-010	Solid shaft
50-020	Spacer bushing	50-080	Rolling bearing
50-100	Shaft seal ring	50-120	Sealing cap
50-140	Feather key	50-160	Retaining ring
50-180	Shim	50-300	Nilos ring (for EL3/EL4 installation position)
50-400	Adhesive (for FKM shaft seal rings)	50-410	Lubricant
50-420	Adhesive		


2.7 Pinion shaft

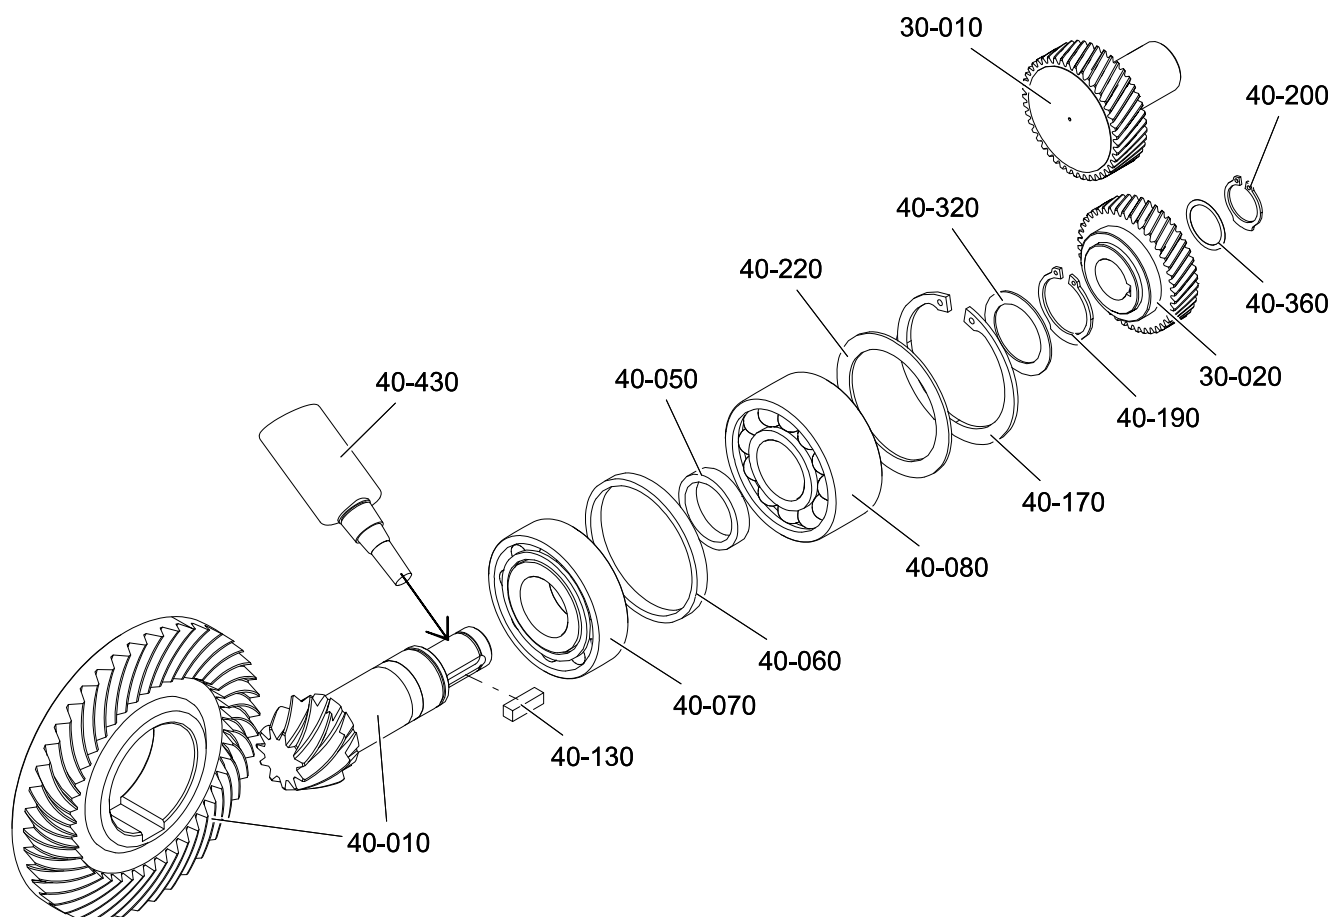

Item No.	Designation	Item No.	Designation
30-010	Pinion	30-020	Gear
40-010	Pinion shaft with crown gear	40-050	Spacer bushing
40-060	Spacer bushing	40-070	Rolling bearing
40-080	Rolling bearing	40-130	Feather key
40-170	Retaining ring	40-190	Retaining ring
40-200	Retaining ring	40-220	Shim
40-320	Shim	40-360	Shim
40-430	Adhesive		

3 Housing types

3.1 Housing with flange, torque arm and baseboards

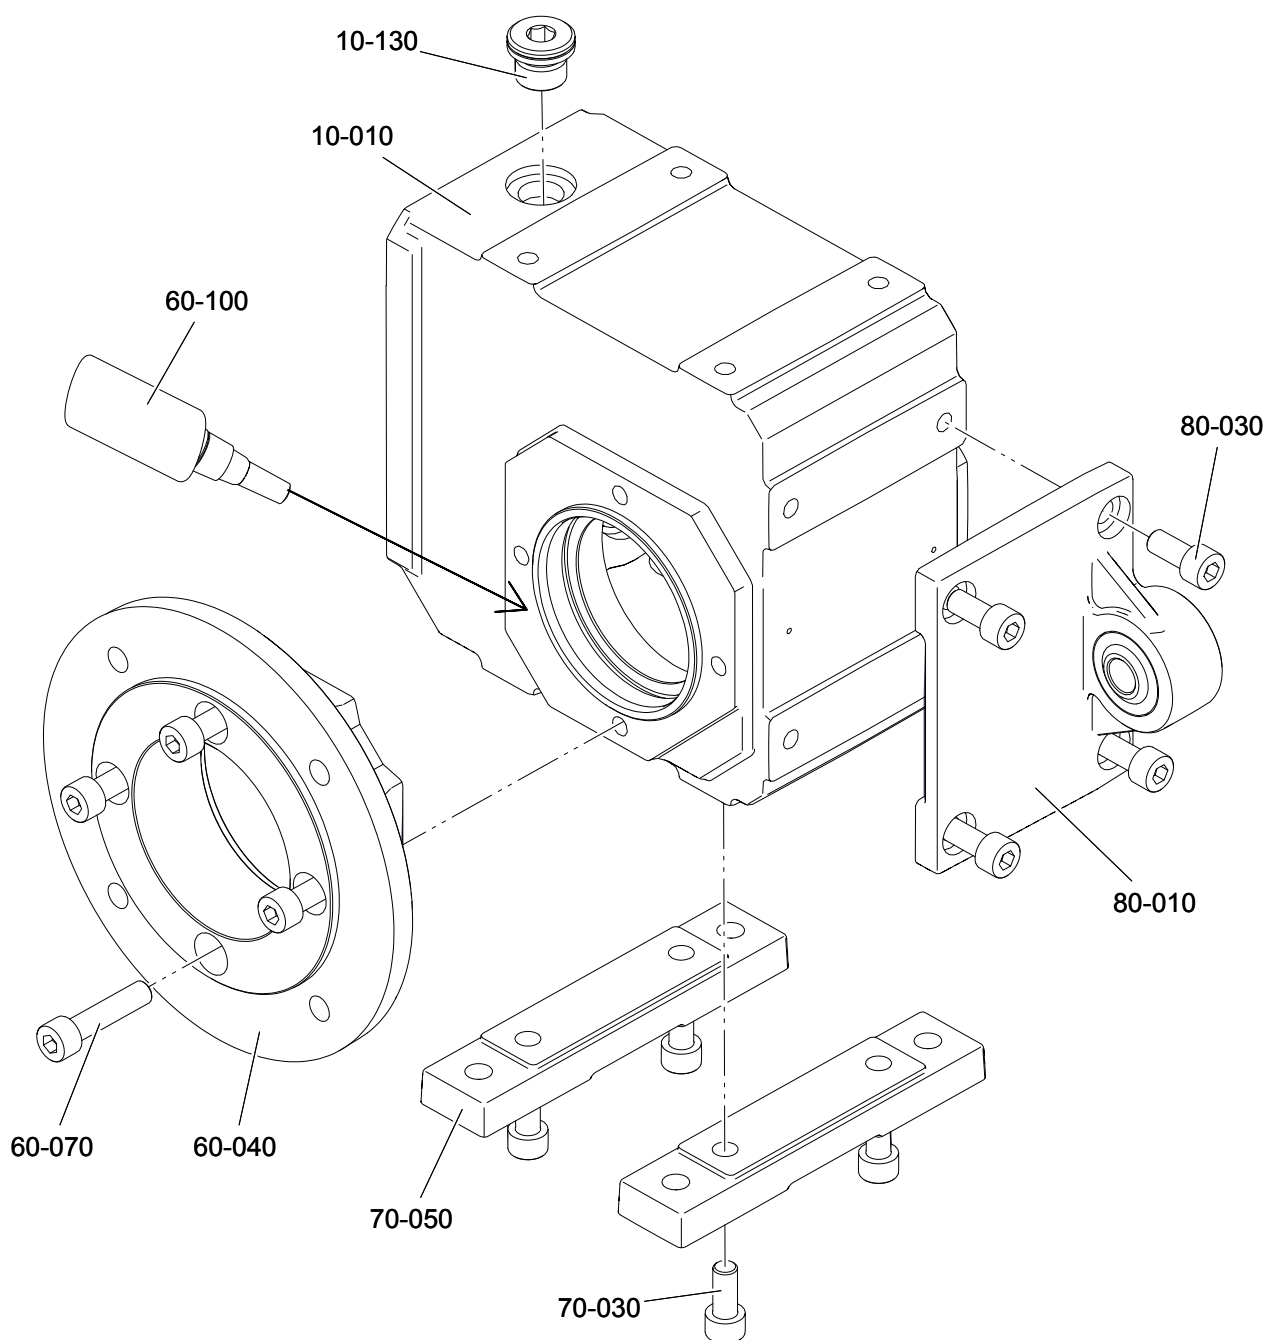


Item No.	Designation	Item No.	Designation
10-010	Gear unit housing	10-130	Threaded sealing plug
60-040	Round flange (optional)	60-070	Cylinder screw (optional)
60-100	Surface seal (optional)	70-030	Cylinder screw (optional)
70-050	Baseboard (optional)	80-010	Torque arm (optional)
80-030	Cylinder screw (optional)		

The round flange can also be attached on the opposite side of the gear unit based on the order (4).

The torque arm can also be attached on gear unit side 1, 2 or turned by 180° and attached based on the order.

The baseboards can also be attached on gear unit side 2 or 5 based on the order.

3.2 Housing with flange for attachment of P, PH planetary gear units

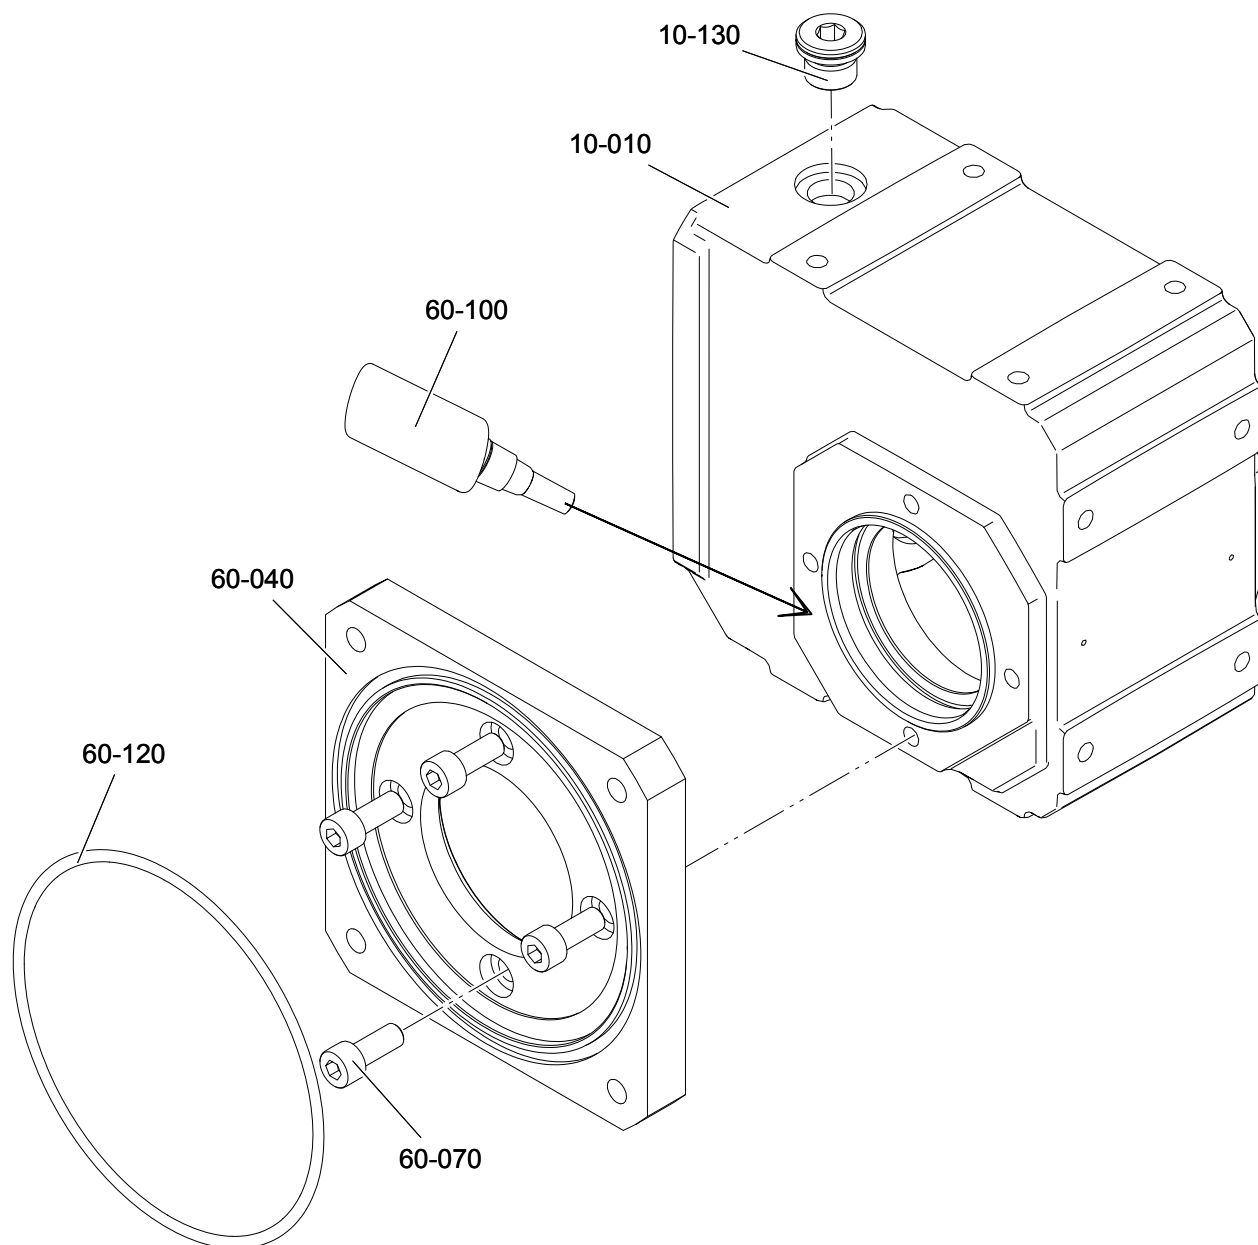


Item No.	Designation	Item No.	Designation
10-010	Gear unit housing	10-130	Threaded sealing plug
60-040	Output flange	60-070	Cylinder screw
60-100	Surface seal	60-120	O-ring

The output flange can also be attached on the opposite side (4) of the gear unit based on the order.

4 Motor connection flange

4.1 Two-stage gear unit

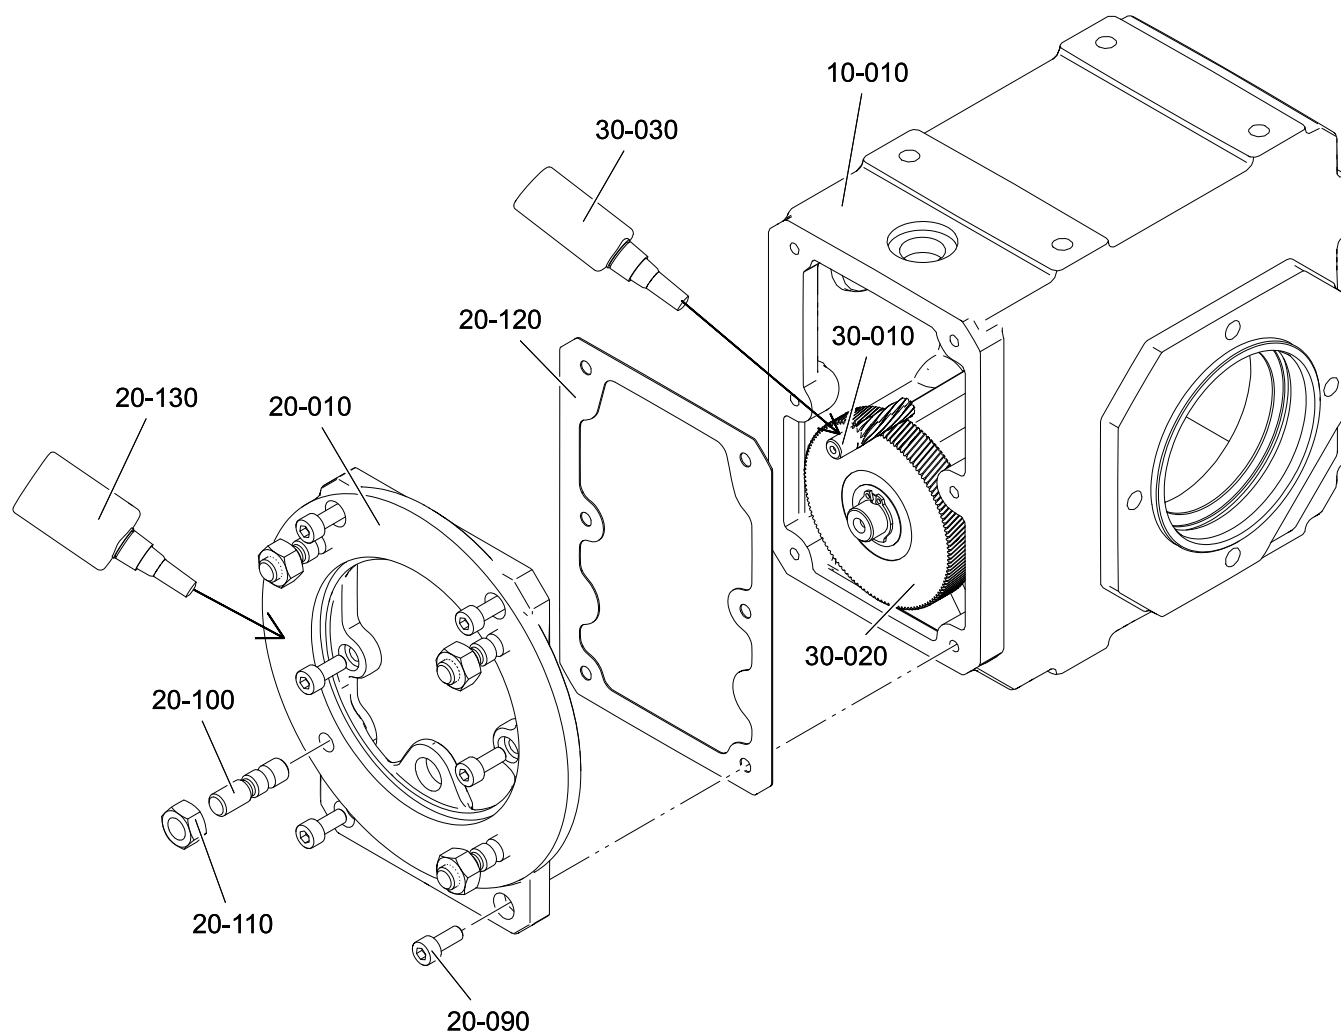

Item No.	Designation	Item No.	Designation
10-010	Gear unit housing	20-010	Motor connecting flange
20-090	Cylinder screw	20-100	Stud screw (except for attachment group ED/EZ/ME) Cylinder screw (for attachment group ED/EZ/ME)
20-110	Hex nut (except for attachment group ED/EZ/ME)	20-120	Flat seal
30-010	Pinion	20-130	Surface seal
30-020	Gear	30-030	Adhesive



STÖBER

WE KEEP THINGS MOVING



Technische Änderungen vorbehalten.
Errors and changes excepted.

ID 443132_en.00
09/2018

STÖBER ANTRIEBSTECHNIK GmbH & Co. KG
Kieselbronner Str. 12
75177 Pforzheim
Germany
Tel. +49 7231 582-0
mail@stoerber.de
www.stoerber.com

24 h Service Hotline +49 7231 582-3000