




STÖBER cLEAN MOTOR FEET

Along with the many additions to the cLEAN motor, such as the resolver and brake, it was decided that NEMA standard feet would be a good investment as well. There are now two new parts/CS Kits that will mount to any of our cLEAN motors.




CS KITS EXPANDED

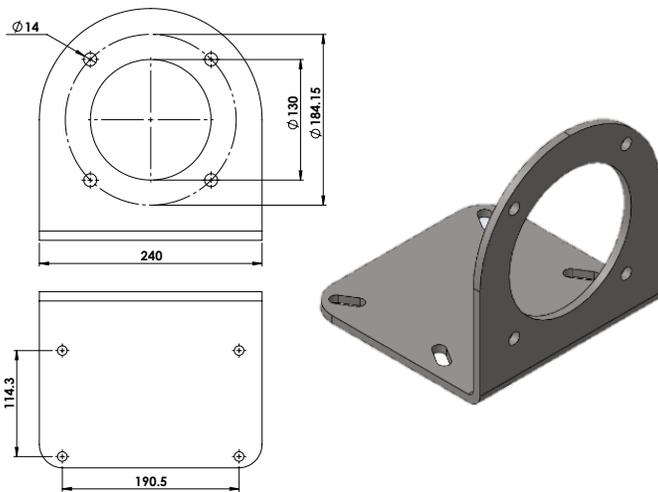

CS137636

This is our 56/143 NEMA framed feet

This CS kit can be used on any 1HP 56C, 2HP 56C, 2HP 143, 3HP 143 (Slotted Holes for NEMA 56C and 143TC foot mounting)
Includes – 4 Bolts and foot mount

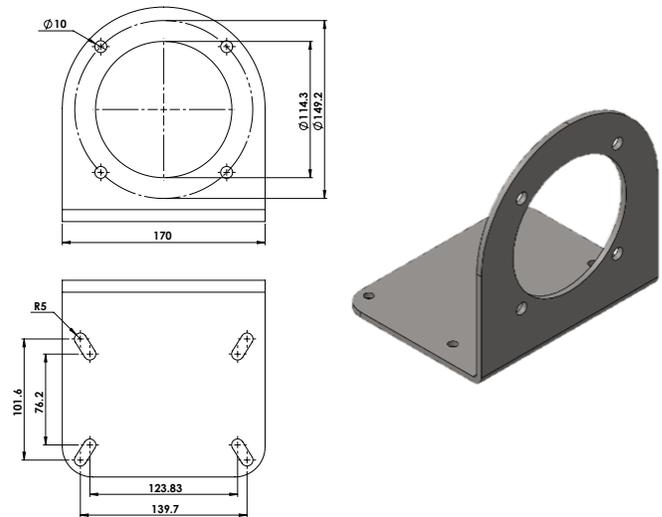

CS137637

This is our 180 NEMA framed feet

This CS kit can be used on the 3HP 180 flange (single hole for NEMA 180-foot mounting)
Includes – 4 Bolts and foot mount

Installation

Simply bolt to your base then insert the motor pilot into the foot. Insert the bolts into the face of the motor and torque them to spec. The bolt spec is 25NM.

*Not configurable in SAP or online configurator. If dimensional drawings or STEP files are needed reach out to inside sales.

